

Remote Programming

1 Program One Remote to an Adjustable Base

Before beginning, make certain the base is plugged into a working, grounded surge protector.

Locate the power down box and press the Learn button on the power down box for 1 second then release. Press and hold both the Flat and Raise Head buttons on the remote simultaneously for more than 5 seconds. The remote LCD display will blink a few times. The LED on the power down box will flash slowly at first then rapidly to indicate that the remote has been programmed to operate a base.

If programming fails, initiate the programming procedure a second time.



2 Program One Remote to Two Bases

Before beginning, make certain the bases are plugged into a working, grounded surge protector.

Locate the power down box for base 1 and press the Learn button on the power down box for 1 second then release. Press and hold both the Flat and Raise Head buttons on the first remote simultaneously for more than 5 seconds. The remote LCD display will blink a few times. The LED on the first power down box will flash slowly at first then rapidly to indicate the remote has been programmed to operate the first base. Repeat these steps with base 2. One remote is now programmed to operate two bases.

If programming fails, initiate the programming procedure a second time.



Remote Programming

3 Program Two Remotes to Two Bases


Before beginning, make certain the bases are plugged into a working, grounded surge protector.

Locate the power down box for base 1 and press the Learn button on the power down box for 1 second then release. Press and hold both the Flat and Raise Head buttons on the first remote simultaneously for more than 5 seconds. The remote LCD display will blink a few times. The LED on the first power down box will flash slowly at first then rapidly to indicate the remote has been programmed to operate the first base.

Repeat these steps with remote 2, then locate the power down box for base 2 and press the Learn button on the power down box for 1 second and release. Repeat all steps for both remotes on both bases.

If programming fails, initiate the programming procedure a second time.

NOTE: Operate only one (1) remote at a time. Operating two (2) remotes at the same time will momentarily block both RF signals and prevent both remotes from functioning.

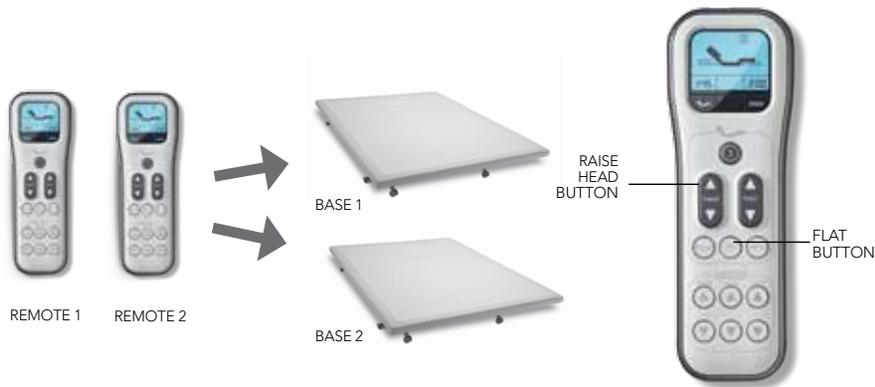

4 Program Two Remotes to a Split King Adjustable Base

Before beginning, make certain the bases are plugged into a working, grounded surge protector.

Locate the power down box for base 1 and press the Learn button on the power down box for 1 second then release. Press and hold both the Flat and Raise Head buttons on the first remote simultaneously for more than 5 seconds. The remote LCD display will blink a few times. The LED on the first power down box will flash slowly at first then rapidly to indicate the remote has been programmed to operate the first base.

NOTE: Wait 90 seconds before proceeding to the second remote.

Locate the power down box for base 2 and press the Learn button on the power down box for 1 second then release. Press and hold both Flat and Raise Head buttons on the second remote simultaneously for more than 5 seconds. The remote LCD display will blink a few times. The LED on the second power down box will flash slowly at first then rapidly to indicate the remote has been programmed to operate the second base.

If programming fails, initiate the programming procedure a second time.

NOTE: Operate only one (1) remote at a time. Operating two (2) remotes at the same time will momentarily block both RF signals and prevent both remotes from functioning.



5 Separate Remotes

Before beginning, make certain the bases are plugged into a working, grounded surge protector.


Locate the power down box for base 1 and press the Learn button on the power down box for 1 second then release. Press and hold both Flat and Raise Head buttons on the first remote simultaneously for more than 5 seconds. The remote LCD display will blink a few times. The LED on the first power down box will flash slowly at first then rapidly to indicate the remote has been programmed to operate the first base.

NOTE: Wait 90 seconds before proceeding to the second remote.

Locate the power down box for base 2 and press the Learn button on the power down box for 1 second then release. Press and hold both Flat and Raise Head buttons on the second remote simultaneously for more than 5 seconds. The remote LCD display will blink a few times. The LED on the second power down box will flash slowly at first then rapidly to indicate the remote has been programmed to operate the second base.

If programming fails, initiate the programming procedure a second time.

NOTE: Operate only one (1) remote at a time. Operating two (2) remotes at the same time will momentarily block both RF signals and prevent both remotes from functioning.

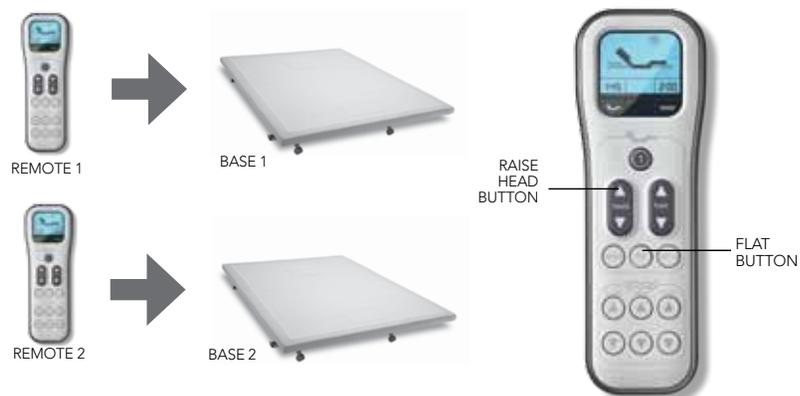

6 In Case of a Power Outage

In case of a power outage, press and hold the Learn button on the power down box to lower the bed to the flat position. This function is only for lowering the bed and will not move the bed to any other position. NOTE: Once the bed is flat the (2) 9 volt batteries should be replaced.

