

# Mattress Parts and Components

		Twin / Twin Long / Full	Double/Queen/ Expanded Queen	King/ California King	Split King / Split California King	FlexTop King / FlexTop California King
Mattress Cover <i>Color and pattern may vary</i>		1	1	1	2	1
Foam Border Walls		4	4	4	8	5
Air Chambers		1	2	2	2	2
Firmness Control System with Remote(s) <i>Remotes will vary</i>		1	1	1	2	1
Hose Extensions		1	1	2	2	2
Center Foam Wall		0	1	1	0	1
Memory Foam Comfort Pad		1	1	1	2	1
Inset Pad		1	1	1	2	1
Foam Base Pad		1	1	1	2	1

### 1 Disassemble Mattress Cover

- Unzip cover and set outer cover aside. (The zipper is located on the bottom of the mattress, just below the bed label.)




### 2 Remove Topper Foam and Set Aside



### 3 Disassemble Inner Cover

- Unzip middle filler panel and set aside.

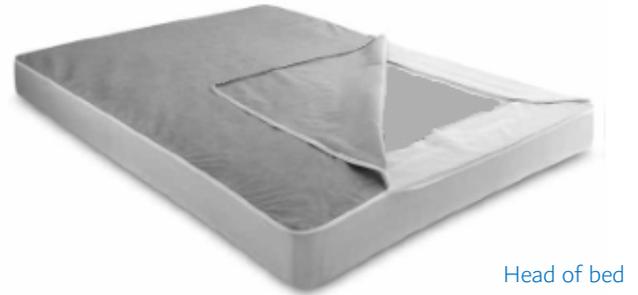

### 4 Remove Inset Pad (X12 only)



## 5 Disconnect Air Hoses, Apply Caps to Chambers



Disconnect each air hose from chamber port



Apply chamber cap to chamber port



Head of bed

## 6 Remove Chambers and Set Aside



Head

## 7 Remove base pad and set aside




Head of bed

## 8 Remove End Walls at Head and Foot of Bed, Set Aside




## 9 Remove Side Walls and Set Aside

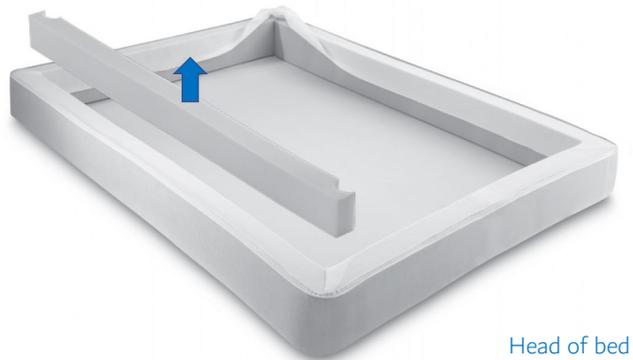

## 10 Remove Mattress Retainer Kit (if included)

- Remove hex head bolts
- Remove Top Attachment Pieces
- Remove Mattress Cover from Base
- Remove Bottom Attachment Pieces (under cover)

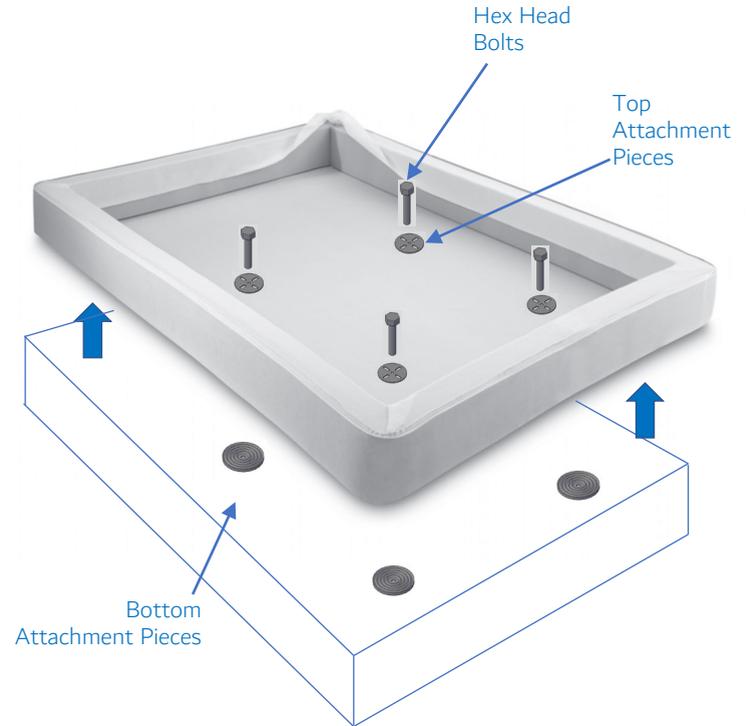


## 11 New Mattress Cover

- Place the mattress cover on your base or existing bed platform, making sure openings in the bottom of the mattress cover are at the head of the bed.
- Unzip the mattress cover and set the mattress cover top aside.




## 12 Inner Cover

- Unzip the inner cover zipper located at the head of the bed (see inset) and set the inner cover panel aside.

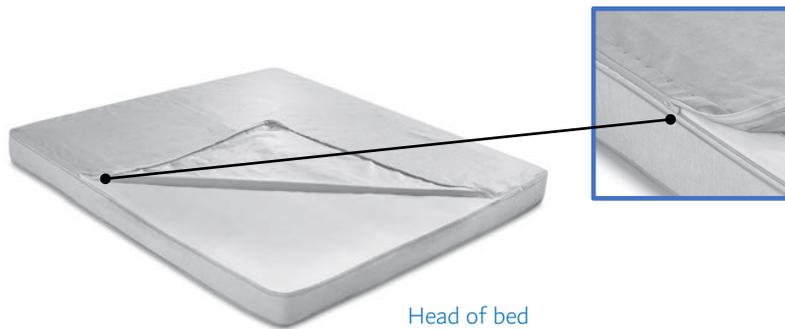


## 13 Install Mattress Retainer Kit (for Adjustable Bases only)


- Position the bottom of the Sleep Number mattress cover on top of the adjustable base ensuring the head of the mattress cover (side openings for air hoses) is matched with the head of the adjustable base, with the fabric mattress cover forming a box..

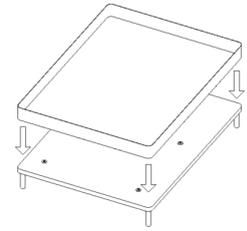


- Invert the mattress cover by pulling the sides of the mattress cover down over the adjustable base.

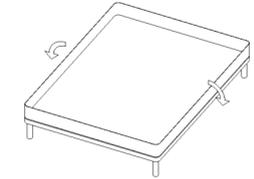

- At each hex bolt location, use a utility knife to make a small cut (no larger than 1/4" long) through the mattress cover fabric.

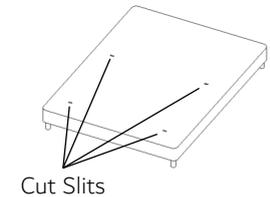


- Pull sides of mattress cover back up to their original position and remove the mattress cover from the base.

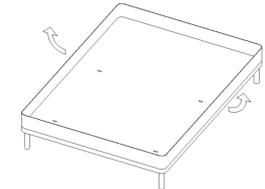


## 14 Mattress Retainer Kit (cont'd for Adjustable Bases only)


- Place the bottom attachment pieces on the adjustable base at each bolt location.

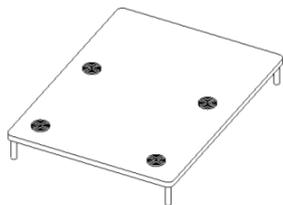


- Place the mattress cover back on the base. Align the mattress cover with the adjustable base ensuring that the head of the mattress is matched with the head of the base.

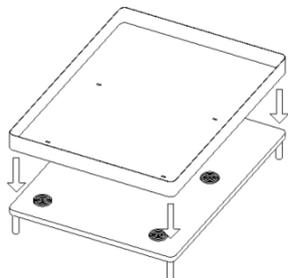

- Place the top attachment pieces over the four cuts and insert hex head bolts.

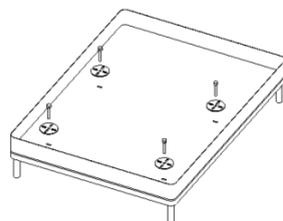


- Tighten all four hex bolts to finger tight. Do not over tighten.

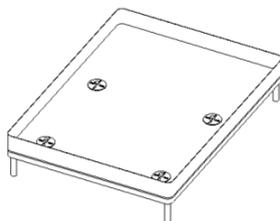

## 15 Foam Side Walls

- Place the long border walls along the inside of the mattress cover, extending the entire length of the bed.
- Make sure that the notches are facing the center of the bed.

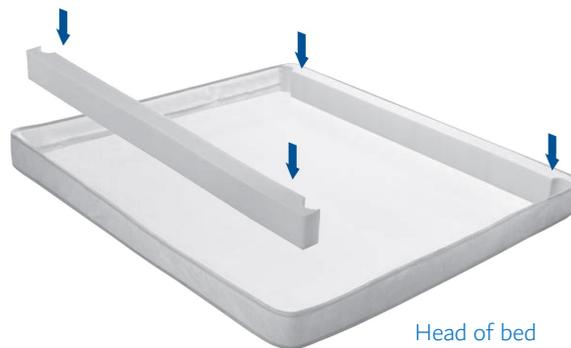

## Double-Beds Only – Corner Lock™ System Assembly

- Place one Corner Lock™ in each corner of the mattress cover bottom.

NOTE: Corner Locks™ must go under the border wrap.

- As you install foam side and end walls, be sure the walls meet inside the Corner Locks™ at each corner. (Double beds use corner locks in place of notched side walls.)



## 16 Foam End Walls

- Place the shorter border walls at the head and foot, between the side walls.
- Make sure the foam border walls are connected securely and squarely.
- Ensure that the zipper is aligned with the top edge of the foam border walls.

NOTE: It is okay if the foam walls bow to the inside of the bed at this point in assembly.




## 17 Foam Base Pad

- Carefully shake out the foam base pad
- Place the foam base pad in the bottom of the mattress cover with the smooth side facing down.



## 18 Air Chambers

- Place the air chambers on top of the foam base pad so the hose connectors face the head of the bed and lie on the bottom when inflated.

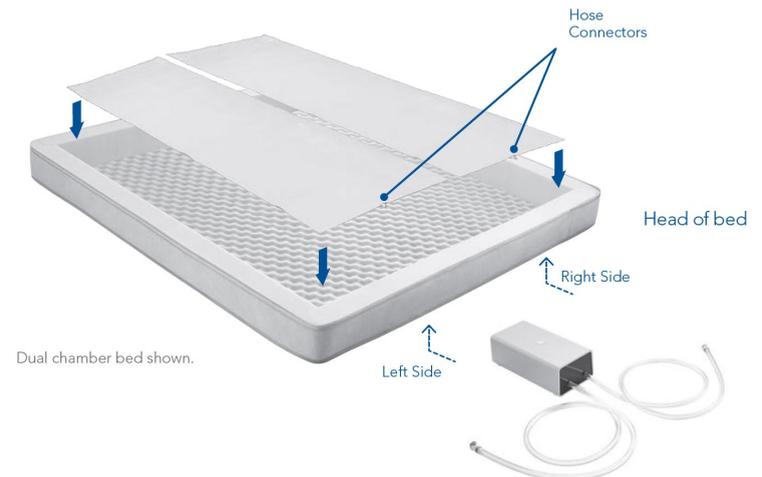


## 19 Firmness Control™ System

### Firmness Control™ System for Dual Chamber Beds

- Pass the Firmness Control™ system hose (marked with a white band) through the opening on the bottom left side of the mattress cover.
- Connect the Firmness Control™ system hose to the left air chamber by pushing together until you hear a click.
- Repeat for the right side of the mattress, using the right Firmness Control™ system hose (marked with a blue band).

### Firmness Control™ System for Single Chamber Beds

- Pass the Firmness Control™ system hose through the opening on the bottom of the mattress cover.
- Connect the Firmness Control™ system hose to the air chamber by pushing together until you hear a click.

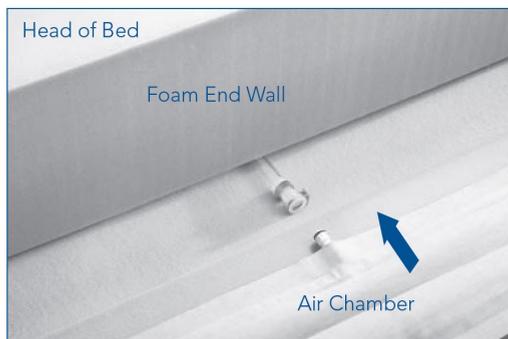

**WARNING:** Firmness Control™ system has no user serviceable parts. Do not open.

## DualAir™ Technology Inside

At the heart of the Sleep Number® bed is our most advanced DualAir™ technology. Adjustable air chambers with a Firmness Control™ system allow you to easily find your ideal level of comfort and support on each side—your Sleep Number® setting. See Remote Quick Start Guide for more details.



### Your Remote at a Glance

## 20 Activate DualAir™ Technology

- Plug your Firmness Control™ system into a working electrical outlet.
- Insert two AA batteries (included) into your remote.
- Your remote will turn on simply by picking it up or by pressing any button. Easy-to-follow instructions will guide you through the next steps.
- Please wait while your mattress inflates; this will take a few minutes. When complete, you'll be prompted to complete your bed assembly.

## 21 Foam Inset Layer (X12 Only)

- Place the inset foam layer on top of air chambers ensuring smooth side is down.



## 22 Border Wrap


- Ensure that the border wrap extends over the air chambers as shown below.

**WARNING:** To ensure compliance with federal and state flammability requirements, border wrap must be positioned correctly within the mattress as shown.



## 23 Inner Cover

- Lay the inner cover panel on top of the air chambers (or Inset Layer with X12 and mLE) and zip the inner cover closed.

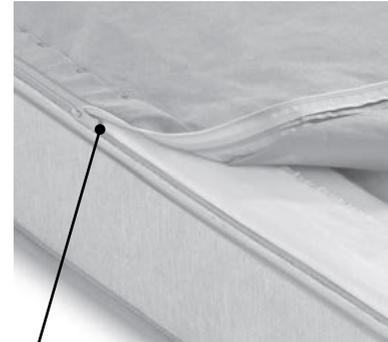

## 24 Memory Foam Comfort Layer

- Place the memory foam comfort layer on top of the inner cover panel.
- Align the memory foam comfort layer with the edges of the bed (the edges of the layer may overhang slightly).



## 25 Mattress Cover Top

- To close the mattress cover, place it on the bed with the zipper pull at the head of the bed.
- Make sure the zipper pin is completely inserted into the zipper box.
- Zip the top of the mattress cover closed..



You're Done!