

How to set up your new
Sleep System.

Imperial Series



SELECT COMFORT®
The Air Bed Company

**If you have any questions or are in need of any
assistance, please contact Customer Service at**

1-800-472-7185.

A few things to know before you start.


Your new Select Comfort® Sleep System is one of the most advanced beds ever developed. Yet it is remarkably simple to set up.

This easy-to-use guide takes you step by step through the set-up process. Just follow the instructions on the following pages and you'll be amazed how quickly everything comes together.

Before you begin.

- If you purchased a foundation and/or a bed frame, assemble these components before you set up your mattress. (Separate assembly instructions are supplied with these items.)
- Check the contents of your mattress boxes against the component list pictured in this guide. If you are missing anything, contact Customer Service at **1-800-472-7185**.
- **IMPORTANT!** Open the vacuum-sealed Foam Comfort Pads and set them aside to allow sufficient time (at least 20 minutes) to expand to their full size.
- For ease of assembly, the instructions will refer to "right" and "left" as if you are standing at the head of the bed looking towards the foot of the bed.
- See following pages for detailed assembly instructions.

Operating your sleep system.

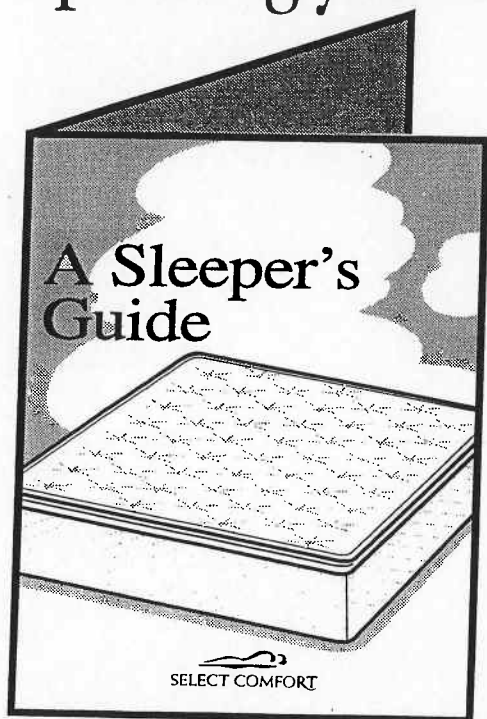

Enclosed is "*A Sleeper's Guide*," which provides complete instructions on operating your sleep system. It explains how to use Sleep Numbers to select your ideal personal comfort level. Please take the time to read this guide. And save it for future reference.

Please Note: With some styles of bed frame, the foundation may extend beyond the frame's support legs. This situation makes it possible for the frame to tip when significant weight is placed at the foot of the bed. Please use caution when sitting or otherwise placing weight on the foot of your bed.

Note for travelers: If you plan to travel or transport your Select Comfort mattress in mountainous regions, temporarily disconnect the mattress from the pump to allow air to escape. Rapid changes in altitude correspond to changes in air pressure that may damage the air chamber.

Answers to Frequently Asked Questions:

Q What does the Sleep Number on my Remote Control refer to?

A A Sleep Number is the precise combination of comfort, firmness and support that feels just right for you. See page 3 in *"A Sleeper's Guide."*

Q How do I choose my own Sleep Number?

A Look for a handy chart of "Suggested Initial Settings" on page 4 of *"A Sleeper's Guide."*

Q How do I use the Remote Control to change the firmness?

A This set-up guide has a diagram indicating the functions of each button. On page 1 of *"A Sleeper's Guide,"* you'll find a more in-depth explanation of its operation.

Q Why do Sleep Numbers occasionally fluctuate?

A No need to panic. Your mattress is NOT leaking. See page 5 of *"A Sleeper's Guide"* for a list of the most common causes of fluctuating Sleep Numbers.

Q What should I do if my Remote Control displays an "Er" message?

A It means the Remote Control and the Base Unit of your Firmness Control System did not communicate. There's an easy solution on page 6 of *"A Sleeper's Guide."*

We urge you to read *"A Sleeper's Guide"* to fully familiarize yourself with all features of your new sleep system. Be sure to save it for future reference.

Answers to Infrequently Asked Questions:

Q What should I do if my bed requires warranty work or replacement parts?

A Please contact our Customer Service Department with any questions about replacement parts or warranty issues. Before returning a part, Customer Service will give you an authorization number. Please see the enclosed warranty statement for full details on your warranty coverage and save for future reference.

Q What if I want to return my bed during the 90-night trial period?

A We hope you are totally satisfied with your Select Comfort

purchase, but if you decide to return the bed, please contact a Customer Service Representative, who will provide you with complete return instructions.

Q How do I get credit for my purchase if I choose to return my bed?

A Be sure to call Customer Service to request a return on or before the end of your 90-night trial period (returns cannot be accepted past 90 days)! Customer Service will provide you with a Return Merchandise Authorization (RMA) number. The RMA number *must* be included with all products returned in order to track your return and promptly process your credit.

Help is just a phone call away.

If you ever have any questions about your new Select Comfort Sleep System, please contact our Customer Service Center at

1-800-472-7185.

Representatives are available (Central Time):


- Monday to Friday 7:00 a.m. to 10:00 p.m.
- Saturday 8:00 a.m. to 5:30 p.m.
- Sunday 10:00 a.m. to 6:30 p.m.



SELECT COMFORT®
The Air Bed Company

Select Comfort Corporation
6105 Trenton Lane North
Minneapolis, MN 55442-3240


Components of your Select Comfort Imperial Sleep System:

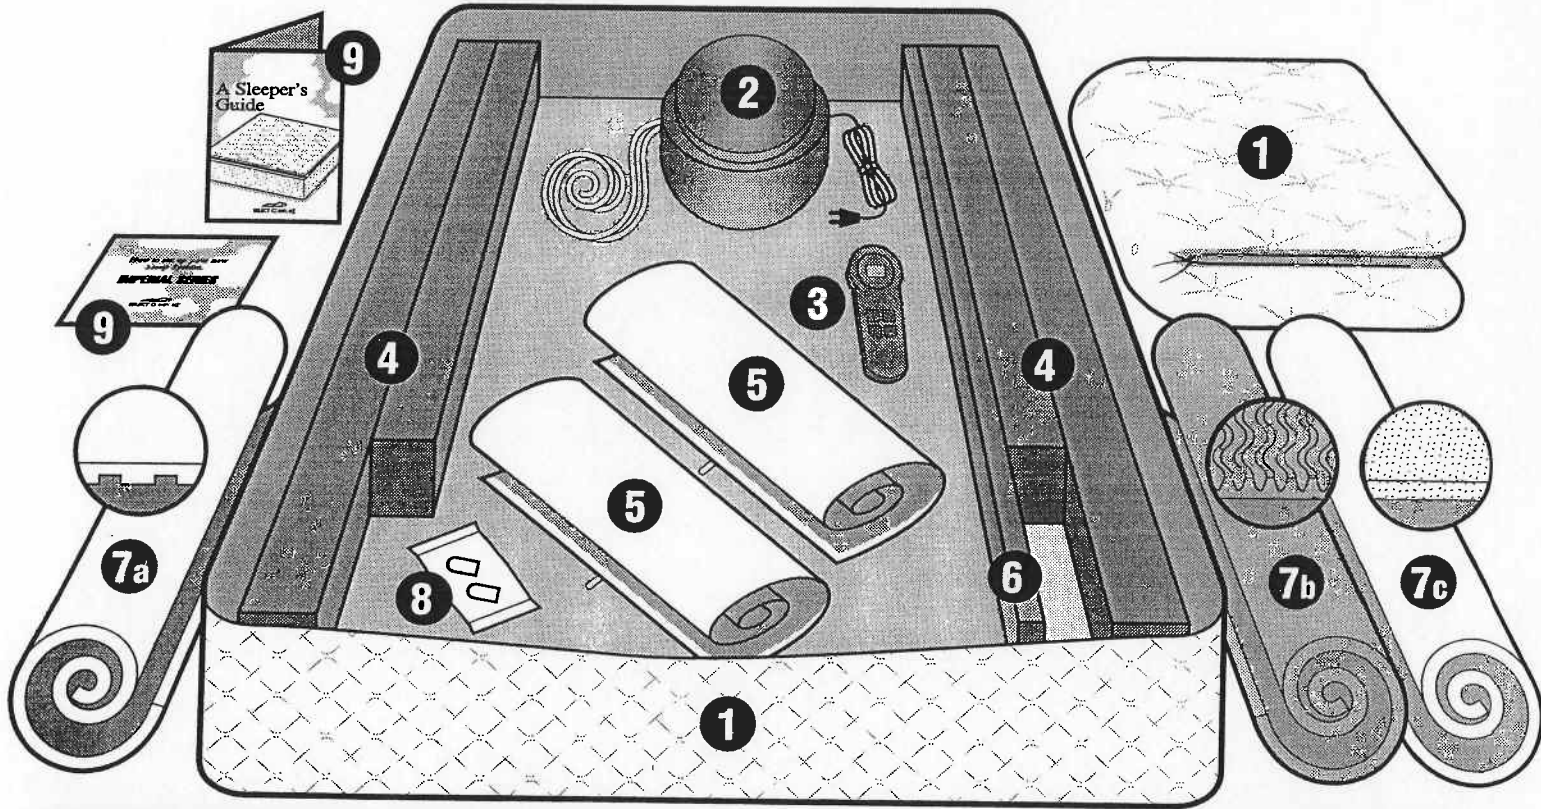

STEP-BY-STEP GUIDE

- 1 Mattress Cover (2 parts zipped together)
- 2 Firmness Control System (FCS)
- 3 Remote Control with 9 volt battery installed
- 4 Foam Border Walls (2 long, 2 short)
- 5 Air Chamber(s) (2 for dual chamber model; 1 for single chamber model)
- 6 Center Foam Wall (for dual chamber model only)
- 7 Foam Comfort Pads (total of 3: base (7a), zoned (7b) and memory foam (7c))
- 8 Caps for Air Chambers (package of 2)
- 9 A Sleeper's Guide and Set-Up Instructions


Functions of the Remote Control

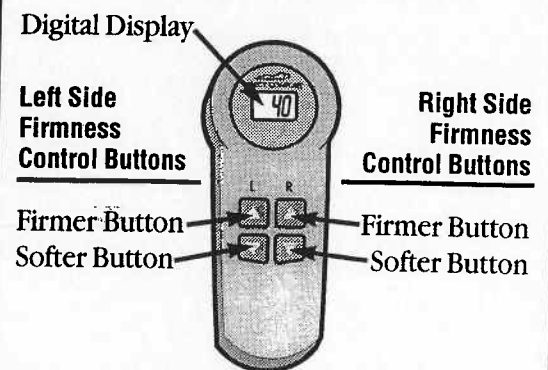

Note: For single chamber model, use only the right side firmness control buttons

Select Comfort Imperial Series Sleep System


1

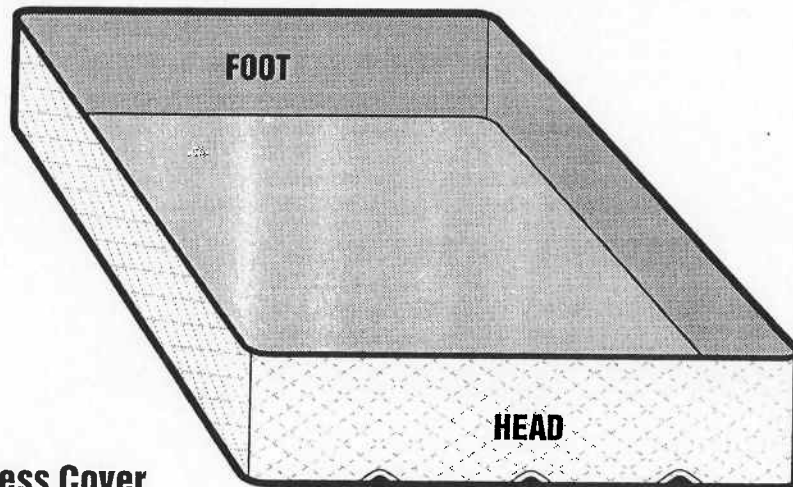

Position the Mattress Cover

- Place the Mattress Cover (quilted side up) on top of the foundation (or bed platform).
- Unzip the top portion of the cover and set it aside.
- Position the cover so that the holes in the underside of the cover are at the head of the bed.

2

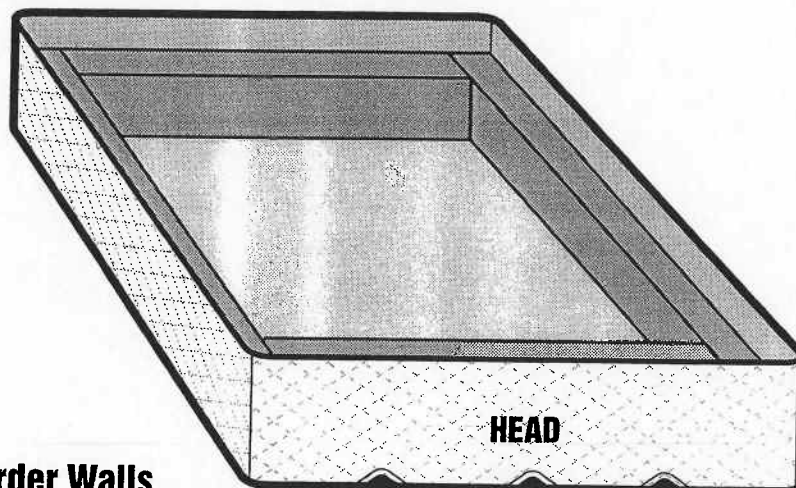


Insert the Foam Border Walls

- Place the two long Foam Border Walls along the sides of the mattress cover with the velcro pads facing inward and the zippers facing downward.
- Place the shorter Foam Border Walls at the head and foot of the bed with the zippers facing downward.
- Connect the velcro pads securely and squarely.

3

Install the Air Chambers(s)

- Lay the Air Chamber(s) inside the mattress cover so that the Hose Connector(s) are on the bottom and faces the head of the bed. The connector(s) will roughly align with the small opening(s) at the base of the mattress cover.

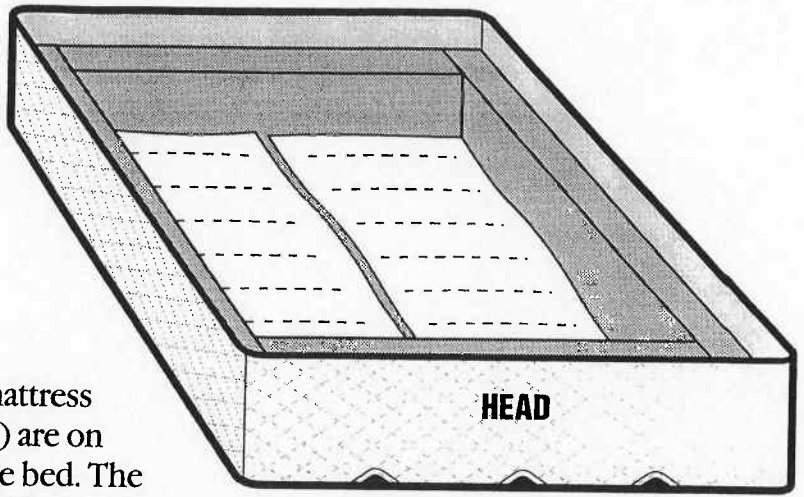


(dual chamber model shown)



4

Connect the Firmness Control System

- Place the Firmness Control System (FCS) on the floor at the head of the bed and plug into an electrical outlet. The unit will "beep" for 1 second, indicating that it is receiving power.
- Take each hose and pass the end through the small opening at the base of the mattress cover, under the Foam Border Wall, and connect it to the corresponding chamber. The Select Comfort product label will be placed at the foot of the bed. (For dual chamber models, the hose marked with an "L" works with the left chamber and the unmarked hose works with the right chamber.)

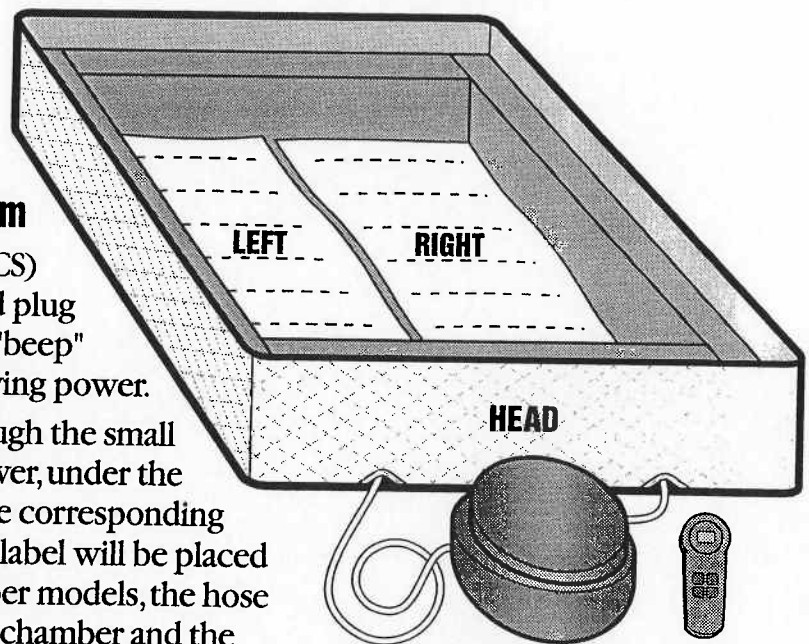


Hint: To ensure a solid connection, press together until they "click."

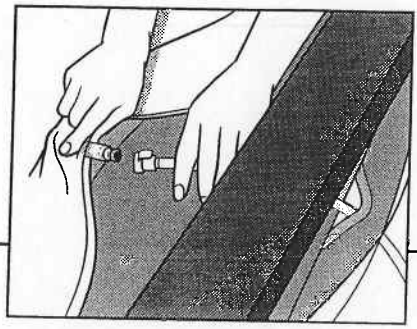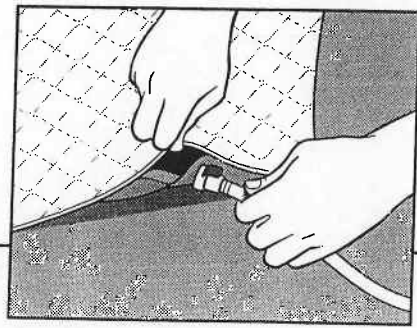

5

Inflate the Air Chambers(s)

- Press the right side “firmer” button on the Remote Control to wake up the FCS. As the Remote Control and Base Unit establish contact, the display will blink several times.
- When the display stops blinking, set the firmness to “20” and the chamber will begin inflating.
- If you have the dual chamber model, once the first chamber has finished inflating, repeat for second. Then insert the Center Foam Wall between the chambers.

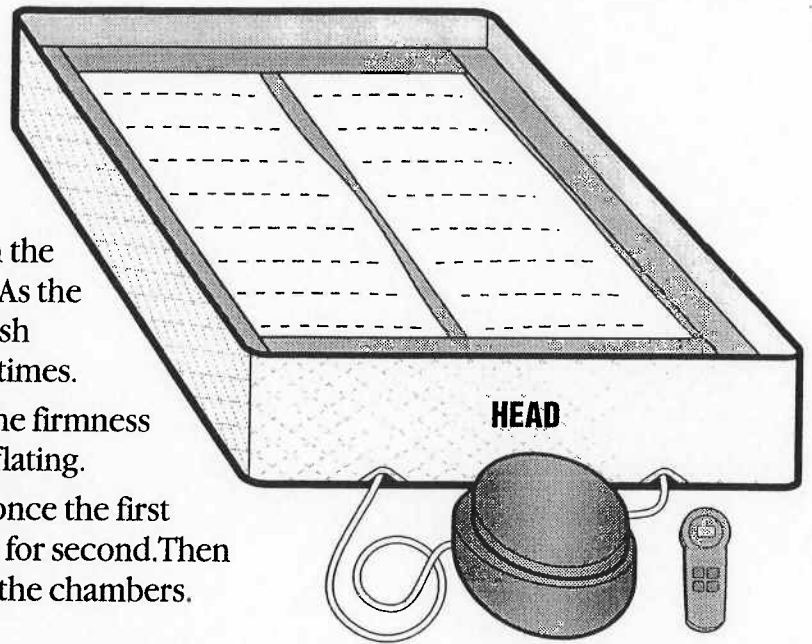


*The first time you fill each chamber, it may take about 15 minutes.
The FCS shuts itself off after 10 minutes, so simply set the firmness to “20” again
to reactivate the pump and complete the initial fill.*


6

Install the Foam Comfort Pads

- Place the Base Foam Comfort Pad (yellow with horizontal channels) on top of the Air Chambers with channels facing down. Center so that the foam rests on top of the Foam Border Walls around all four sides of the mattress.
- Then place the Zoned Foam Comfort Pad (charcoal color with varying “zones” of firmness) on top of the Base Foam Comfort Pad with “zones” facing up. The end with the clipped corners should be at the head of the bed. This pad should fit squarely on top of the first pad.
(Hint: Positioning the pad is easiest if you “shake it out” much as you would when placing new sheets on your bed.)
- Finally, place the Memory Foam Comfort Pad (smooth coral color) on top of the Zoned Foam Comfort Pad. Again, this pad should rest evenly on top of the others.

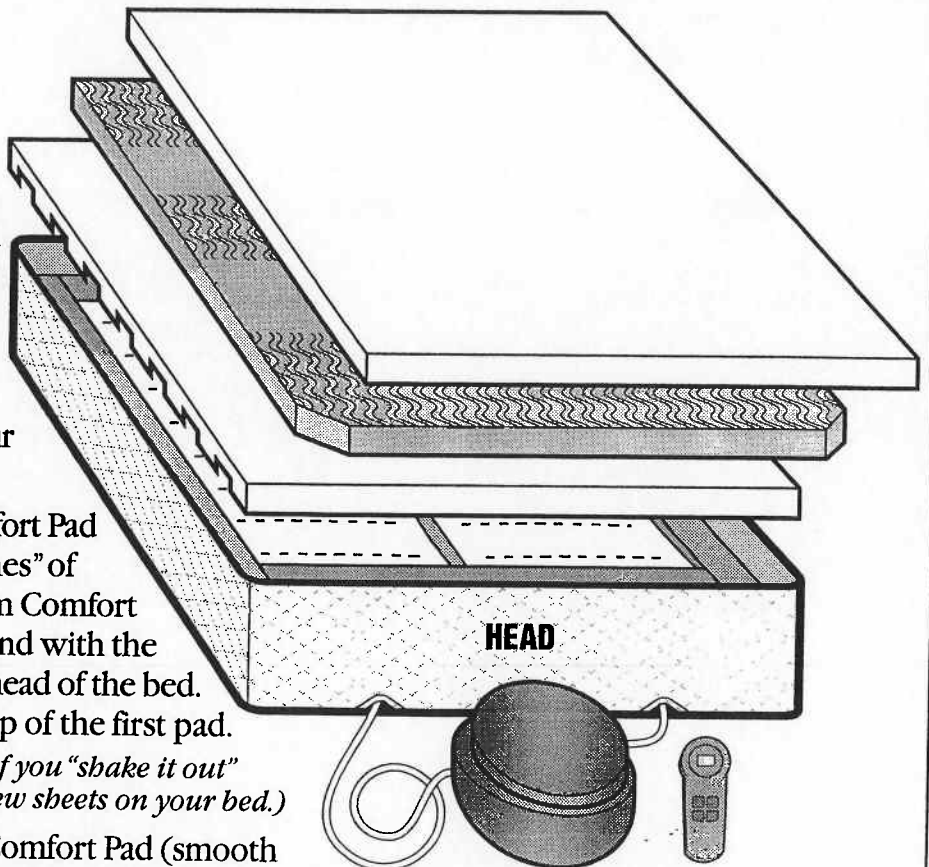

7

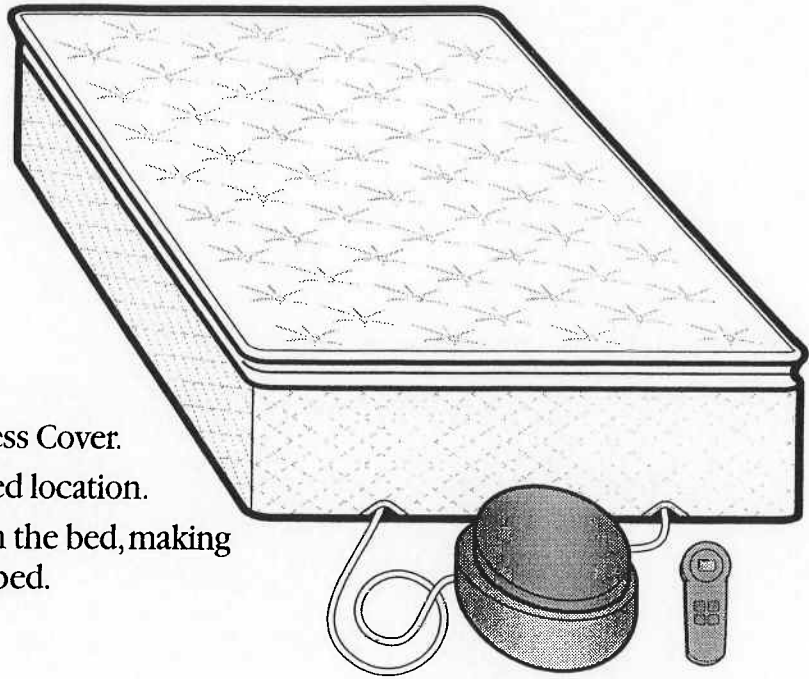

Final Steps

- Zip on the top of the Mattress Cover.
- Move the bed to your desired location.
- Arrange the FCS underneath the bed, making sure the hoses are not crimped.

That's it! You're done.

Be sure to read "A Sleeper's Guide," which explains how to adjust mattress firmness and provides other user information. And have a good night's sleep!