

Before You Begin

Assembling Your Mattress

Carefully check the contents of your mattress boxes.

Make sure you have the correct number of components for the size of bed you are assembling. If you are missing any items listed to the right, please call 1.800.472.7185 or email Customer Service at customerservice@selectcomfort.com

Prepare your foam comfort layer.

Open and set aside. It'll need at least 30 minutes to fully expand.

Mattress: What's Included

	Queen	King	Flextop
Mattress Cover	1	1	1
Foam Border Walls	4	4	5*
Center Foam Wall	1	1	1
Memory Foam Comfort Layer	1	1	1
Foam Base Pad	1	1	1
Air Chambers	2 Zippered	2 Zippered	2
Firmness Control™ System	1	1	1
Inset Comfort Layer	1	1	1

Mattress Components

Mattress Cover



Shown as packaged

Pattern may vary

Foam Border Walls



* 2 short, 1 medium, 2 long

Center Foam Wall



Comfort Layer

Base Pad

Inset Pad



Shown as packaged

Air Chambers



Voice control module(s)



Remote(s)



Firmness Control™ System

Hose Extensions


Some texture and surface appearances may vary from those shown.

1. Align Mattress

- For Queen and King mattresses
 - Unzip the Sleep Number mattress cover and set cover top aside
- For Flextop King Mattresses
 - Unzip the outer cover from one head corner to the other. DO **NOT COMPLETELY UNZIP**


2. Inner Cover

- Unzip the inner cover zipper located at the head of the bed (see inset) and set gray inner cover panel aside.
- Make sure the openings in the bottom of the mattress cover are at the head of the bed.

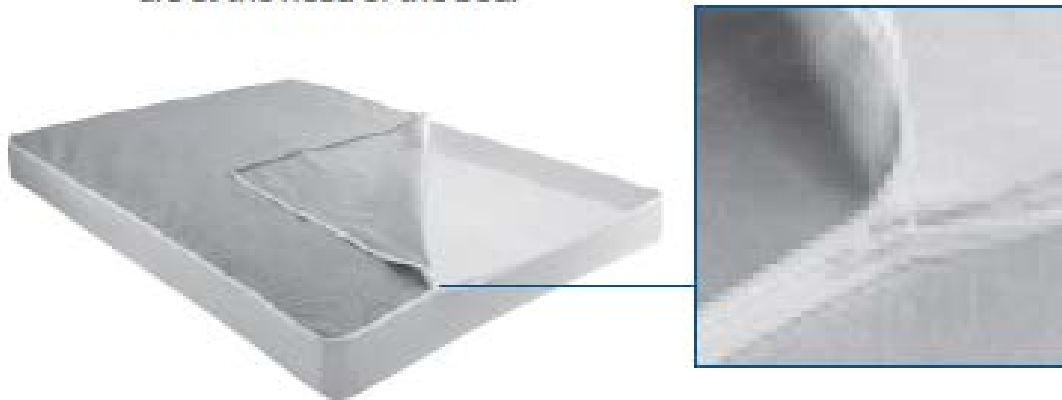


3. Install Mattress Retainer Kit

- Remove hex head bolts
- Place the bottom attachment pieces between the adjustable base and mattress cover bottom at each hex head bolt location
- Place the mattress cover bottom back on the base. Align the mattress cover with the adjustable base ensuring that the head of the mattress is matched with the head of the base.
- Place the top attachment pieces over the four cuts and insert hex head bolts.
- Tighten all four hex head bolts to finger tight. Do not over tighten.
- Continue on to mattress assembly instructions

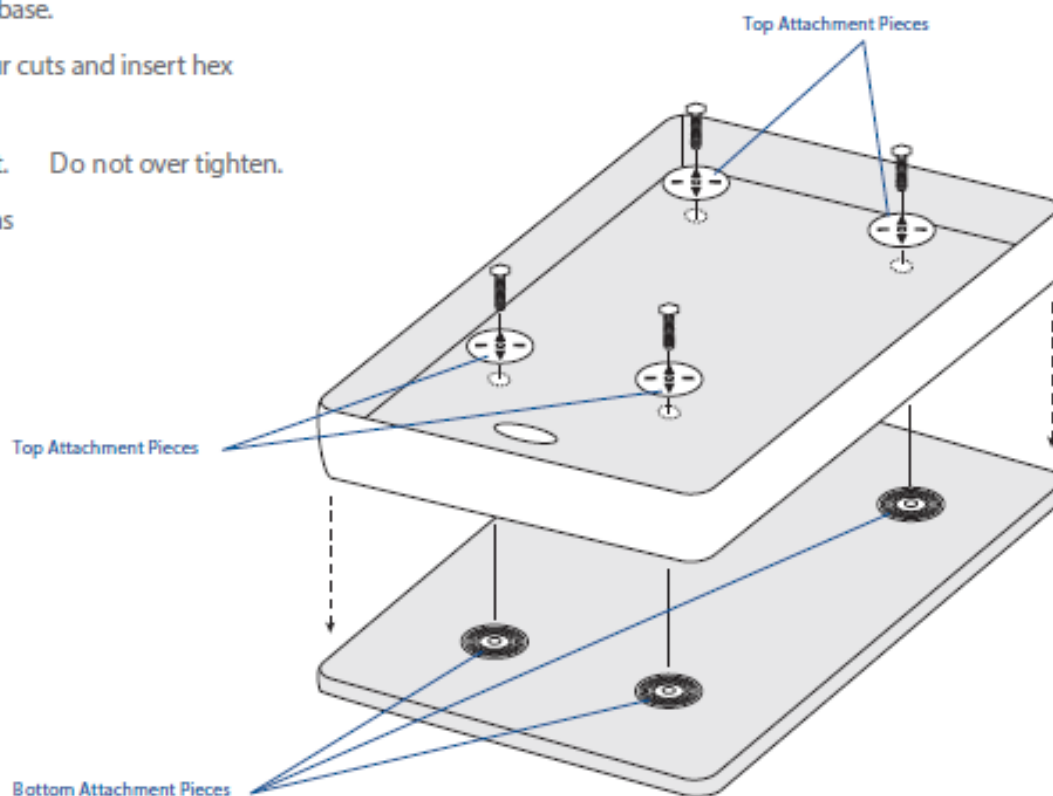


- Position the bottom of the Sleep Number mattress cover on top of the adjustable base ensuring the head of the mattress cover (side with openings for air hoses) is matched with the head of the adjustable base. Make sure the air chambers and foam border walls are not installed, leaving only the fabric mattress cover forming a box (diagram A below).
- Invert the mattress cover by pulling the sides of the mattress cover down over the adjustable base (diagram B below).
- At each hex head bolt location, use the utility knife to make a small cut (no larger than ¼" long) through the mattress cover fabric.
- Push the mattress cover back up to their original position. Remove the mattress cover.

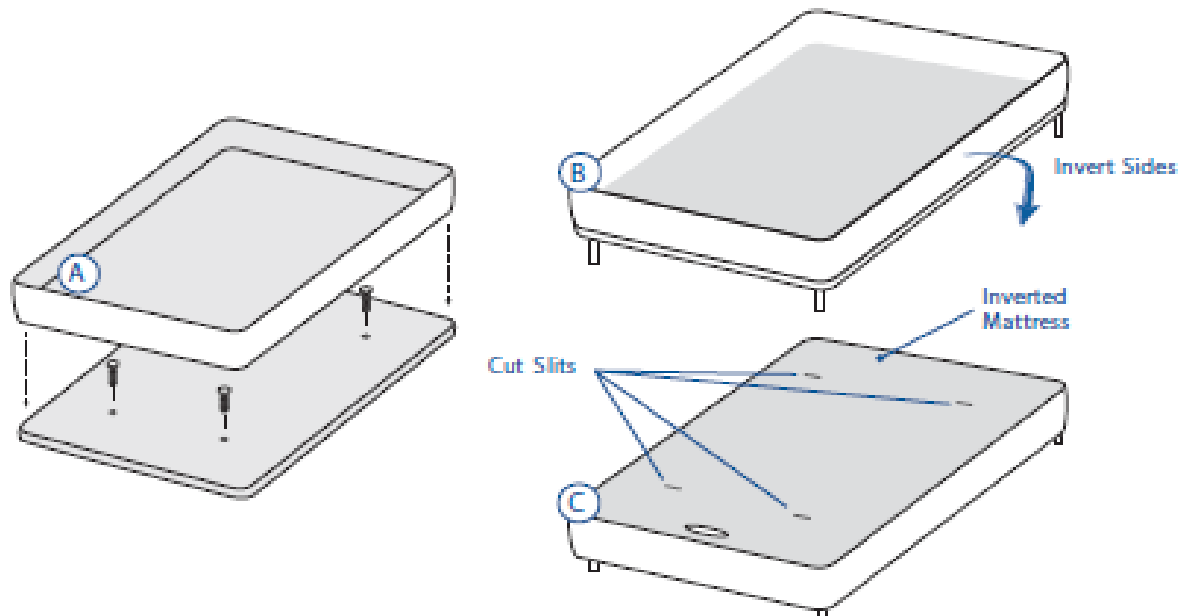

4. Foam Side Walls


- Place long border walls along inside of mattress cover, extending the entire length of the bed.
- Make sure that the notches are facing the center of the bed.

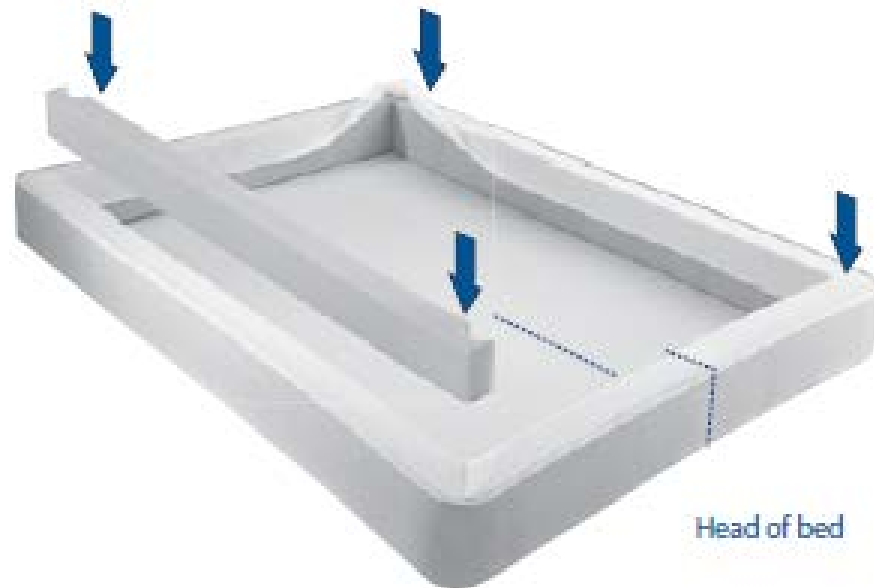

5. Foam End Walls

- Place short border walls at the head and foot, between the side walls. *FlexTop: place shortest end at the head of the bed with the flat edge facing the middle.
- Make sure the foam border walls are connected securely and squarely.
- Ensure that the zipper is aligned with the top edge of the foam border walls.

NOTE: It is okay if the foam walls bow to the inside of the bed at this point in the assembly.

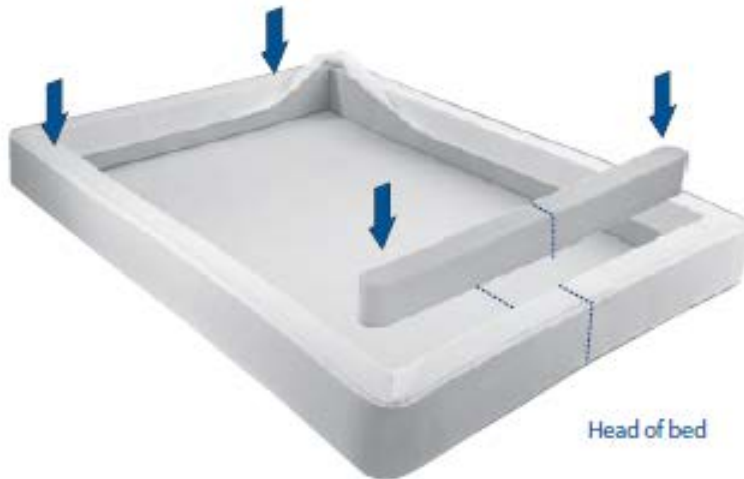


6. Foam Base Pad

- Carefully shake out the pad.
- Place the foam base pad in the bottom of the mattress cover.



7. Air Chamber(s)

- Place air chamber(s) on top of foam base pad so the hose connectors face the head of the bed and lie on the bottom when inflated.
- Connect hose extensions to eagle pump
- Inflate chambers to ~ 40

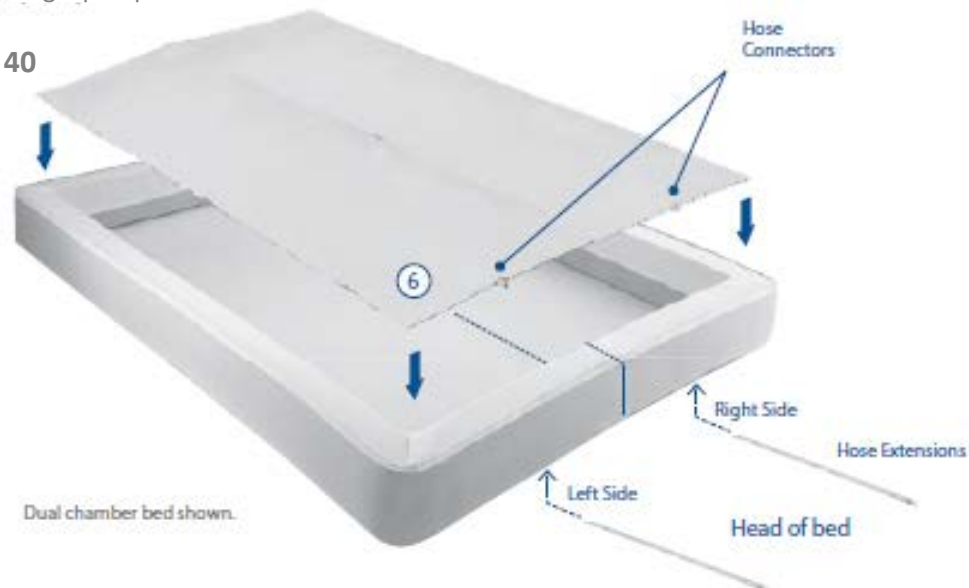


8. Center Foam Wall

- Insert center foam wall between the air chambers.
- Zip air chambers together. (King and queen only)



9. Foam Inset Layer

- Place the inset foam layer on top of air chambers ensuring smooth side is down

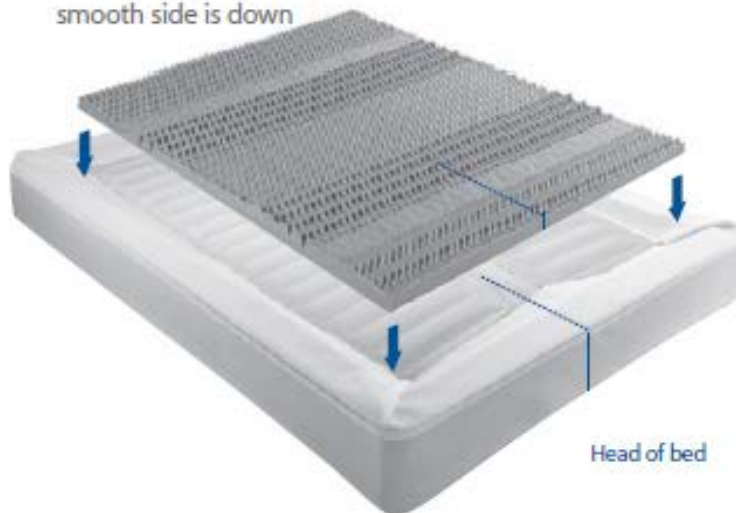

10. Border Wrap

- Ensure that the border wrap extends over the inset comfort layer as shown in figure A.



11. Inner Cover

- Lay inner cover panel on top of inset comfort layer and zip inner cover closed (figure B).

*FlexTop zipper is located in middle




12. Memory Foam Comfort Layer

- Place the memory foam comfort layer on top of the gray inner cover panel, ensuring that the **blue** side of the layer is facing **up**.

Important Safety Notice: To ensure compliance with federal flammability requirements, ensure white side of layer is facing down.

- Align memory foam comfort layer with edges of bed (edges of layer may overhang slightly). Align FlexTop portion at the head of the bed.

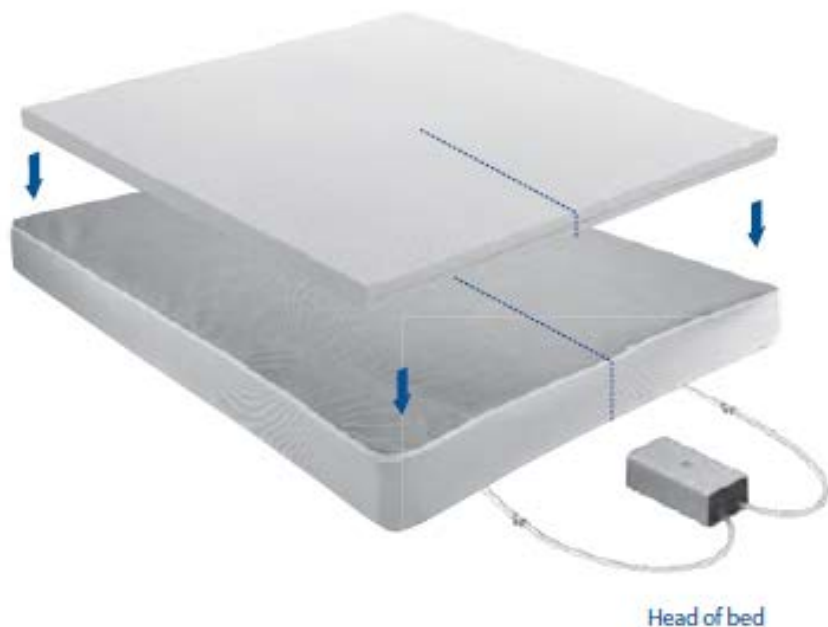

13. Mattress Cover Top

- Fit outer mattress cover over and around memory foam comfort layer and inner cover assembly by aligning upper and lower zipper tail on right side of bed.

Note: the zipper is approximately 4" under the edge of the mattress, beginning just below the bed label, and has a 4-inch tail.



14. You're Done!

- Now turn the page to individualize your remote.