

How to set up your new
Sleep System.

Elite Series

Pillowtop and Traditional Models




SELECT COMFORT®

The Air Bed Company

**If you have any questions or are in need of any
assistance, please contact Customer Service at**

1-800-472-7185.

Components of your Select Comfort Elite Sleep System:

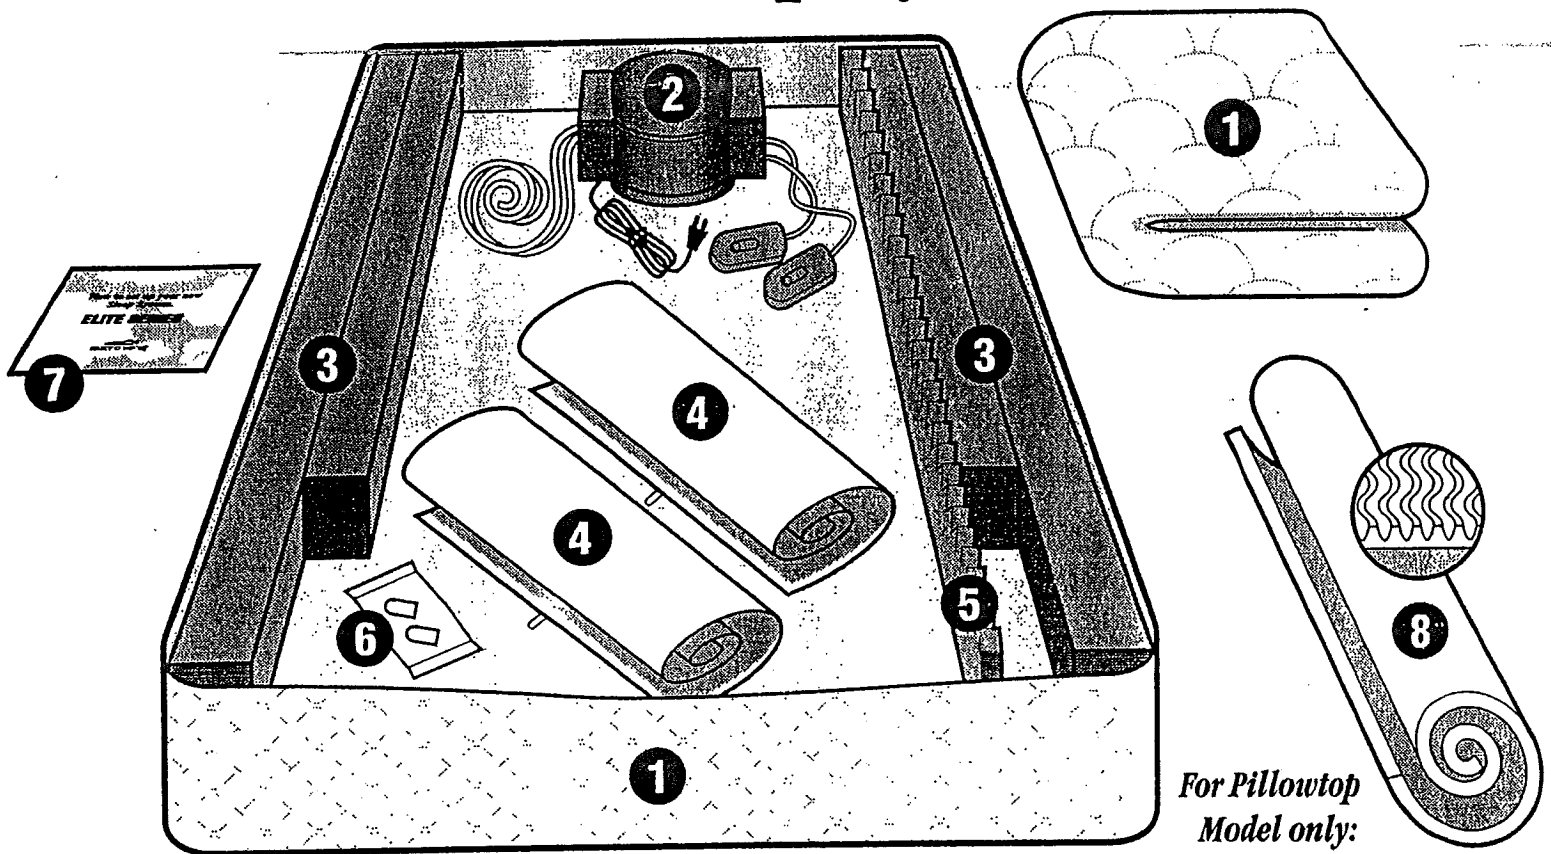

STEP-BY-STEP GUIDE

- ① Mattress Cover (2 parts zipped together)
 - ② Firmness Control System (FCS)
 - ③ Foam Border Walls (2 long, 2 short)
 - ④ Air Chamber(s) (2 for dual chamber model; 1 for single chamber model)
 - ⑤ Center Foam Wall (for dual chamber model only)
 - ⑥ Caps for Air Chamber(s) (package of 2)
 - ⑦ Set-Up Instructions and Warranty Statement
- And for Pillowtop Model only:*
- ⑧ Foam Comfort Pad (1)

A few things to know before you start.

Your new Select Comfort® Sleep System is one of the most advanced beds ever developed. Yet it is remarkably simple to set up.

This easy-to-use guide takes you step by step through the set-up process. Just follow the instructions on the following pages and you'll be amazed how quickly everything comes together.

Before you begin.

- If you purchased a foundation and/or a bed frame, assemble these components before you set up your mattress. (Separate assembly instructions are supplied with these items.)
- Check the contents of your mattress boxes against the component list pictured in this guide. If you are missing anything, contact Customer Service at **1-800-472-7185**.
- **IMPORTANT!** If you have a Pillowtop Model Mattress, open the vacuum-sealed Foam Comfort Pad and set it aside to allow sufficient time (at least 20 minutes) for it to expand to its full size.
- For ease of assembly, the instructions will refer to "right" and "left" as if you are standing at the head of the bed looking towards the foot of the bed.
- See following pages for detailed assembly instructions.

Using Your Sleep System.

- For tips on finding your ideal comfort level, see the "Answers to Frequently Asked Questions" section.
- If you need any assistance with your bed, our Customer Service Representatives will be happy to assist you. Please call **1-800-472-7185**.
- Please save these instructions for future reference.

Please Note: With some styles of bed frame, the foundation may extend beyond the frame's support legs. This situation makes it possible for the frame to tip when significant weight is placed at the foot of the bed. Please use caution when sitting or otherwise placing weight on the foot of your bed.


Note for travelers: If you plan to travel or transport your Select Comfort mattress in mountainous regions, temporarily disconnect the mattress from the pump to allow air to escape. Rapid changes in altitude correspond to changes in air pressure that may damage the air chamber.

Select Comfort Elite Series Sleep System

1

Position the Mattress Cover


- Place the Mattress Cover (quilted side up) on top of the foundation (or bed platform).
- Unzip the top portion of the cover and set it aside.
- Position the cover so that the holes in the underside of the cover are at the head of the bed.

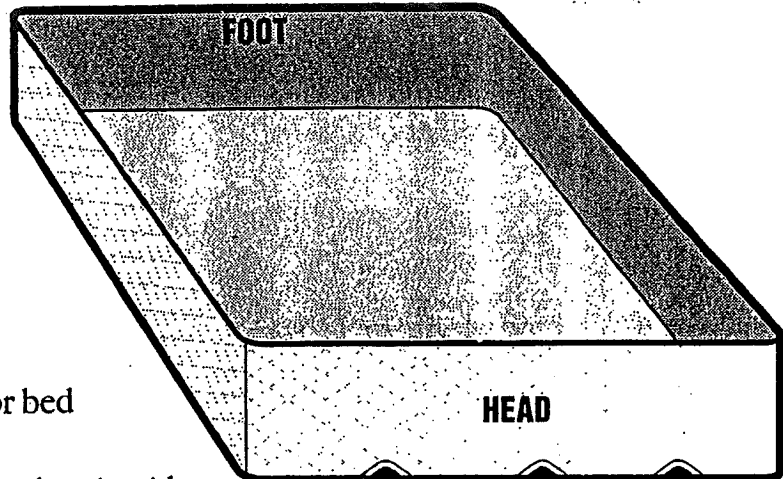

2

Insert the Foam Border Walls


- Place the two long Foam Border Walls along the sides of the mattress cover with the velcro pads facing inward and the zippers facing downward.
- Place the shorter Foam Border Walls at the head and foot of the bed with the zippers facing downward.
- Connect the velcro pads securely and squarely.

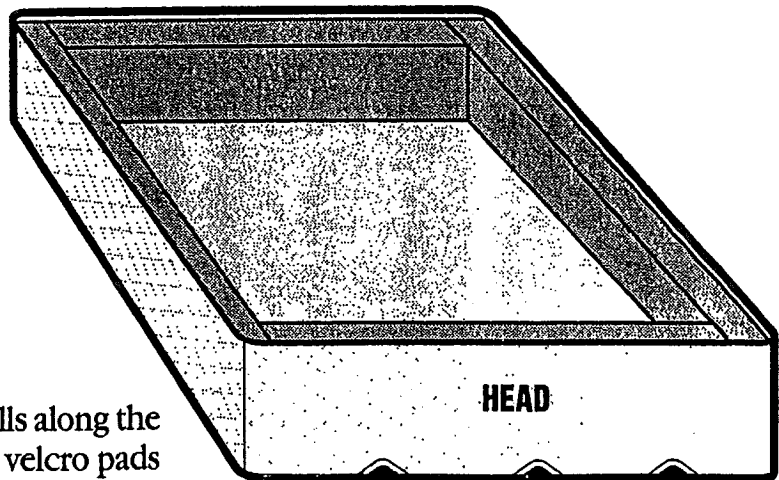

3

Install the Air Chamber(s)

- Lay the Air Chamber(s) inside the mattress cover so that the Hose Connector(s) are on the bottom and face the head of the bed. The connector(s) will roughly align with the small opening(s) at the base of the mattress cover.

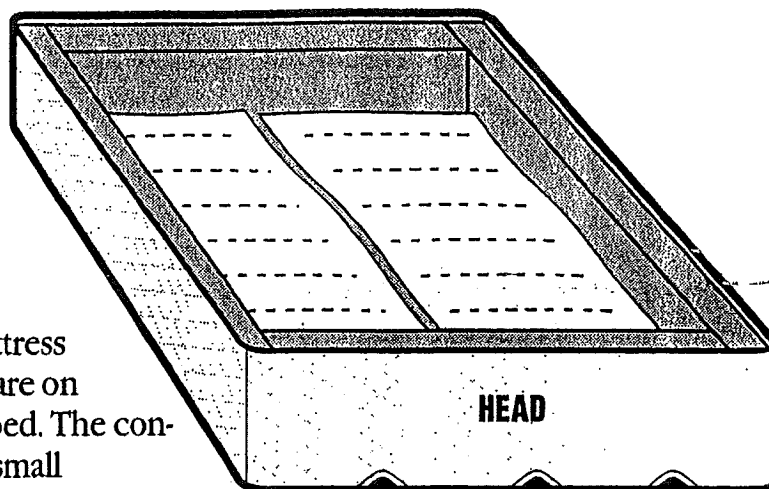


(dual chamber model shown)



4

Connect the Firmness Control System

- Place the Firmness Control System (FCS) on the floor at the head of the bed and plug into an electrical outlet.
- Take each hose and pass the end through the small opening at the base of the mattress cover, under the Foam Border Wall, and connect it to the corresponding chamber. The Select Comfort product label will be placed at the foot of the bed. (For dual chamber models, the top hose of the FCS works with the right chamber; the bottom hose works with the left chamber.)

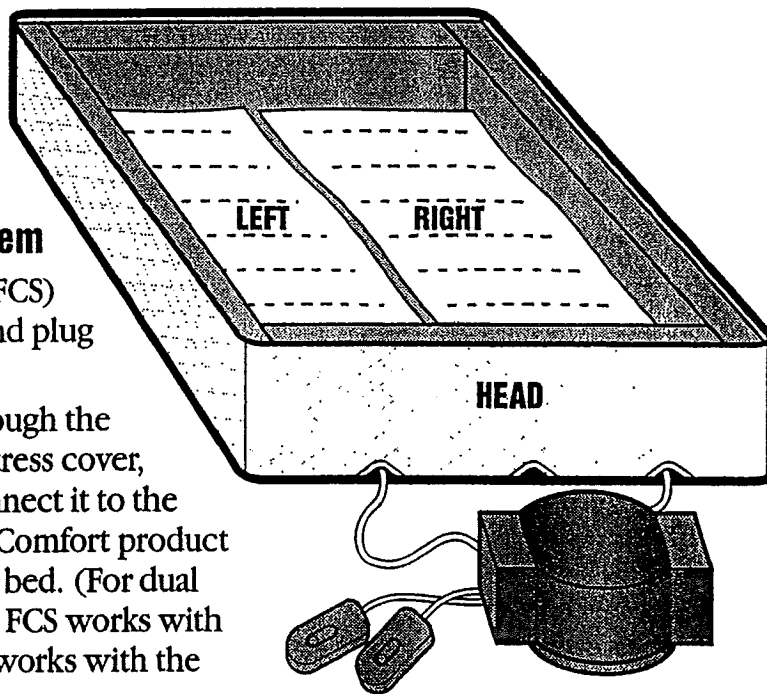


Hint: To ensure a solid connection, press together until they "click."

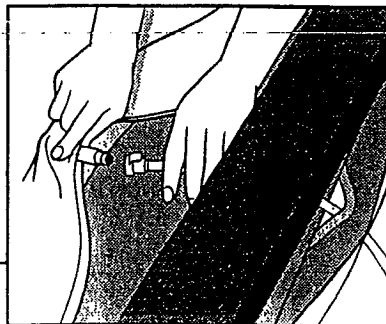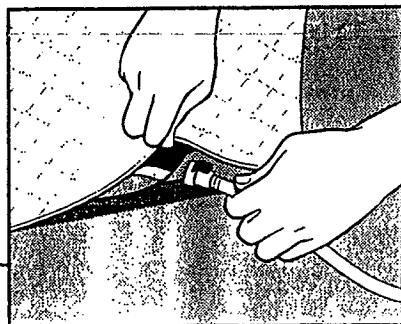

5

Inflate the Air Chamber(s)

- Press "firmer" on the hand control until one air chamber is mostly inflated. (Do not fully inflate the air chamber at this time.)
- When finished, repeat for second air chamber if you have a dual chamber model.
 - Next, for dual chamber mattresses, insert the Center Foam Wall between the two air chambers, centering it between the head and foot.

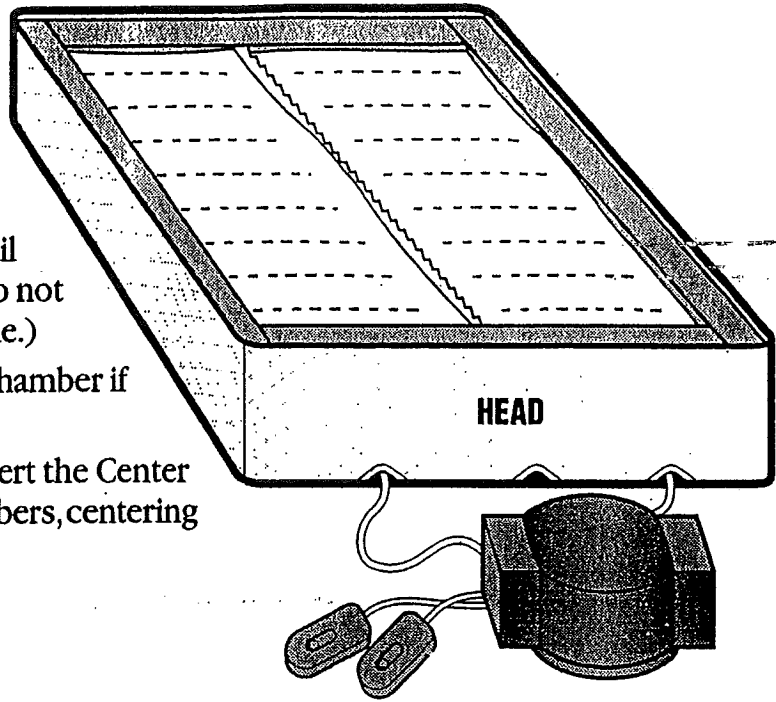


6

*If you have a
Pillowtop Model Mattress ...*


Install the Foam Comfort Pad

- Place the Foam Comfort Pad on top of the Air Chamber(s) with the "zones" facing up. The end with the clipped corners should be at the head of the bed. The pad should rest neatly on top of the chamber(s), nesting inside the Foam Border Walls.


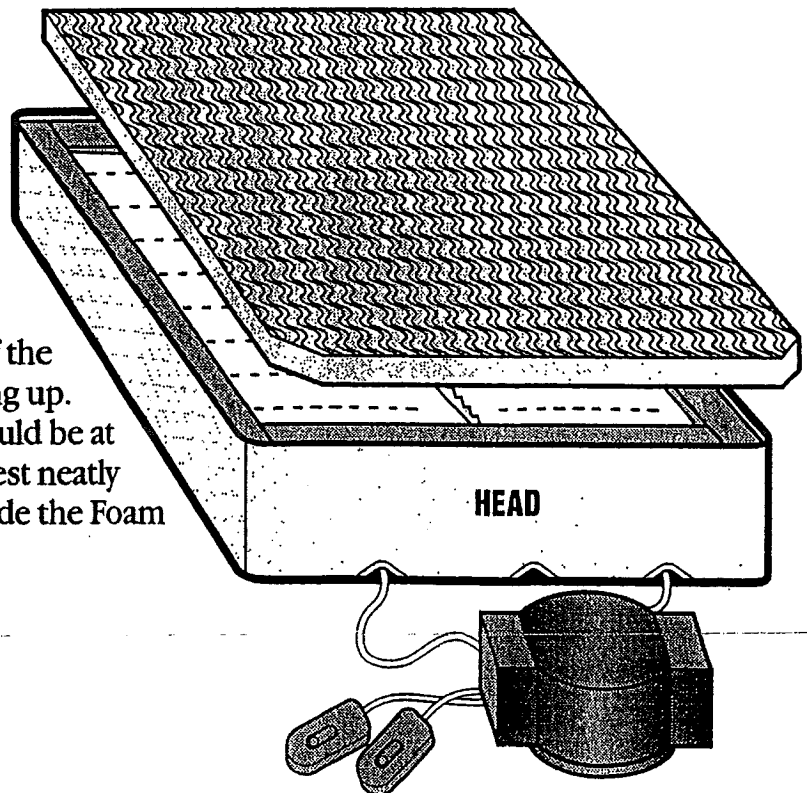


7

Pillowtop Model

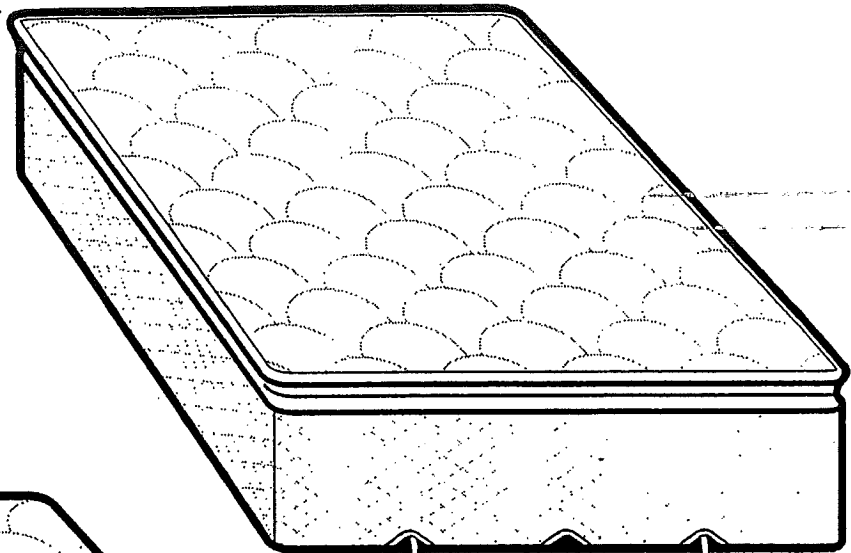

Traditional Model

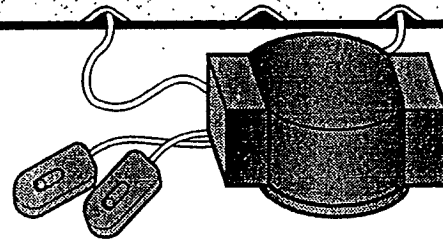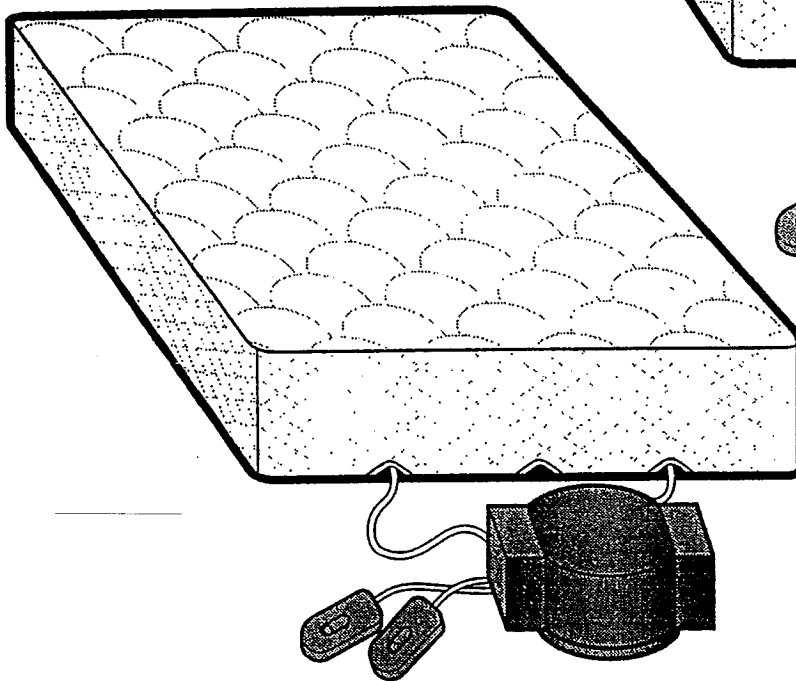

Final Steps

- Zip on the top of the Mattress Cover.
- Move the bed to your desired location.
- Arrange the FCS underneath the bed, making sure the hoses are not crimped.
- Now, lie down on the bed and use the hand control(s) to inflate both sides of the bed to their firmest level. (When a chamber does not seem to be getting any fuller it is fully inflated.)
- One at a time, use the hand control(s) to adjust the bed to your desired comfort level. For further guidance on finding your ideal comfort level, see the "Answers to Commonly Asked Questions" section. Please save this guide for future reference.