

# Remote Function

## FlexFit Plus™ Adjustable Base

REMOTE WARNING: Any attempt to make changes or modifications to the remote (eg. an intentional radiator) could void the user's authority to operate the remote according to FCC Certification. (section 15.231)

### A Low Battery

If low battery indicator is lit up, batteries need to be changed.

### B Remote Troubleshooting

Pressing and holding both Head Massage Down button and Foot Massage Down button for 3 seconds will force the remote into a self-test mode. If LCD displays either "1" or "2" error code, the remote needs to be replaced. If you get either error code call customer service at 1-800-472-7185.

1 – Radio error

2 – Battery circuit error

### C Position Timer

Press to set the current position timer in 15-minute increments up to 180 minutes. Once it reaches 180 minutes, the next increment goes back to 0. Once timer has expired, the base will return to the flat position. If a position other than flat is desired, press and hold Custom Preset 1 as you set the position timer. Once the timer has expired, the base will return to the Custom Preset 1 position.

### D Massage Timer

Press to set the current massage timer in 15-minute increments up to 30 minutes. Once it reaches 30 minutes, the next increment goes back to 0. Massage timer does not activate the massage feature. Once massage feature is activated and massage timer has expired, the massage feature will stop. Activating the massage timer and setting it to 0 will not turn off the massage. If massage timer is activated after massage has already been on, the massage will end in 30 min from when it was first turned on. As a safety feature the massage will only operate for a maximum of 30 minutes at a time.

### E Custom Preset 1

Press and hold for more than 3 seconds to set current position or function (massage or wave) as the programmed position and/or function. The LCD display will show "1" to indicate that the position and/or function has been set. Press Custom Preset 1 to return the bed to the custom programmed position and/or function. LCD display will show "1" and bed animation of both head and foot sections.

NOTE: See important safety instructions and remote care on page 8.



### F Raise Head/Lower Head

Press and hold to raise or lower the head section to reach desired position. LCD will display animation of the head section.

### G Raise Foot/Lower Foot

Press and hold to raise or lower the foot section.

### H Lounge

Press Lounge – the head and foot sections rise to a lounge position. LCD will display bed animation of both head and foot sections.

### I Flat

Press Flat – the head and foot sections go to the flat position and both massage and position timers reset to 0. Pressing the Flat button will automatically turn off all massage features.

### J Zero Gravity

Press Zero Gravity – the head and foot sections raise to 7 degrees.

### K Head Massage

Press and hold for more than 3 seconds to turn the head massage feature on or off. Press the up arrow to increase massage intensity; press the down arrow to decrease massage intensity. LCD display will light up.

### L Wave Massage

Press and hold for more than 3 seconds to turn the wave massage feature on or off. Press the up arrow to increase massage intensity; press the down arrow to decrease massage intensity. LCD display will light up.

### M Foot Massage

Press and hold for more than 3 seconds to turn the foot massage feature on or off. Press the up arrow to increase massage intensity; press the down arrow to decrease massage intensity. LCD display will light up.