
FOUNDATION ONLY - ERGO KIT INSTALLATION GUIDE

TOOLS RECOMMENDED




8mm SOCKET WRENCH




PHILIPS SCREWDRIVER

PARTS INCLUDED IN KIT

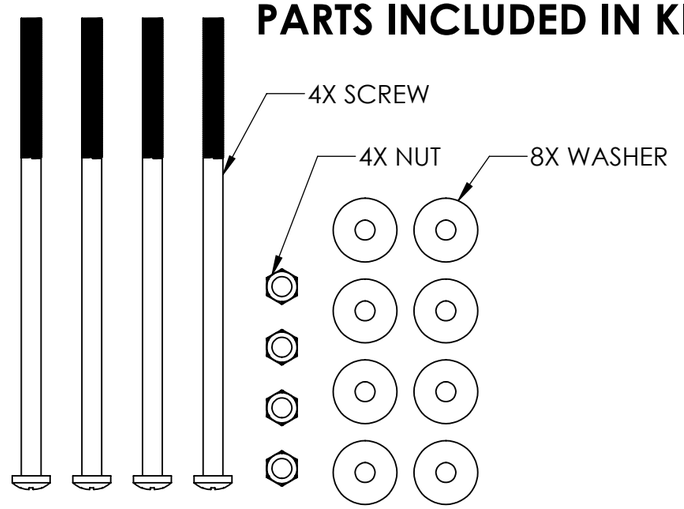

STEP 1: PLACE A WASHER ONTO SCREW AND INSERT INTO THE OPENING OF SLOTTED METAL RAIL BRACKET FOUND AT EACH CORNER OF THE BASE.

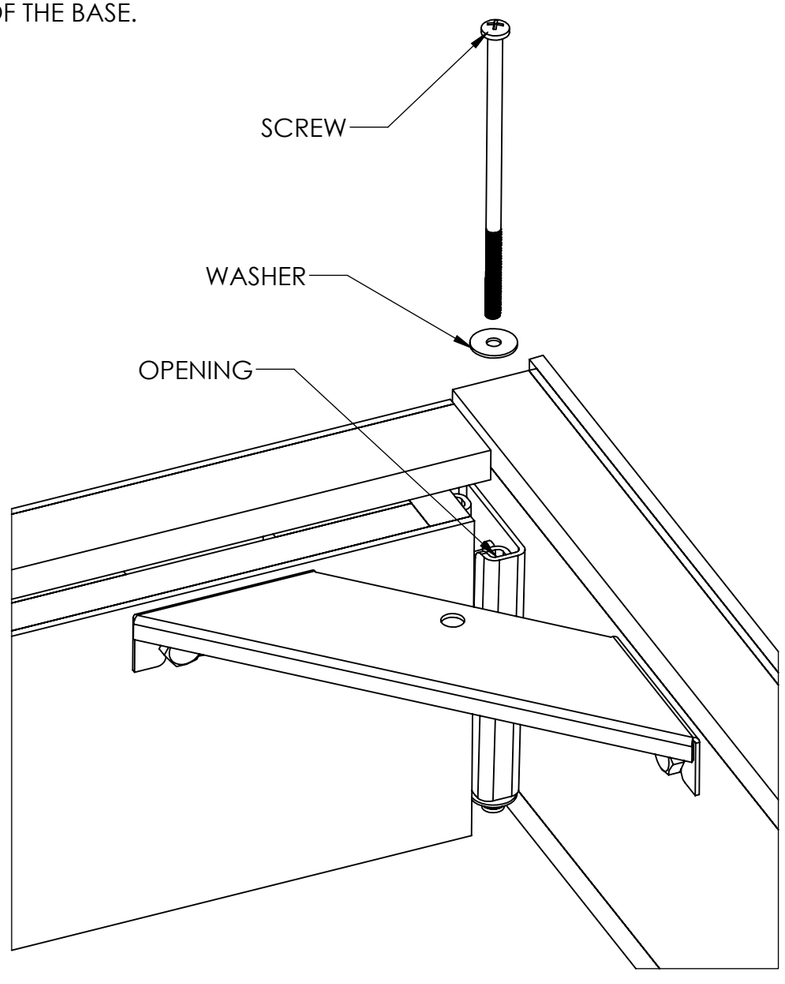

STEP 2: APPLY PRESSURE ON TOP OF SCREW WITH SCREWDRIVER UNTIL WASHER IS FLUSH WITH BRACKET. ASSEMBLE A WASHER AND NUT ONTO THE BOTTOM OF THE SCREW AND TIGHTEN FIRMLY.

STEP 3: REPEAT STEPS 1 & 2 FOR ALL CORNERS OF THE BASE.

