

How to set up your new Sleep System.

Ultra Series

Pillowtop and Traditional Models




SELECT COMFORT®
The Air Bed Company

**If you have any questions or are in need of any
assistance, please contact Customer Service at**

1-800-472-7185.

Components of your Select Comfort Ultra Sleep System:

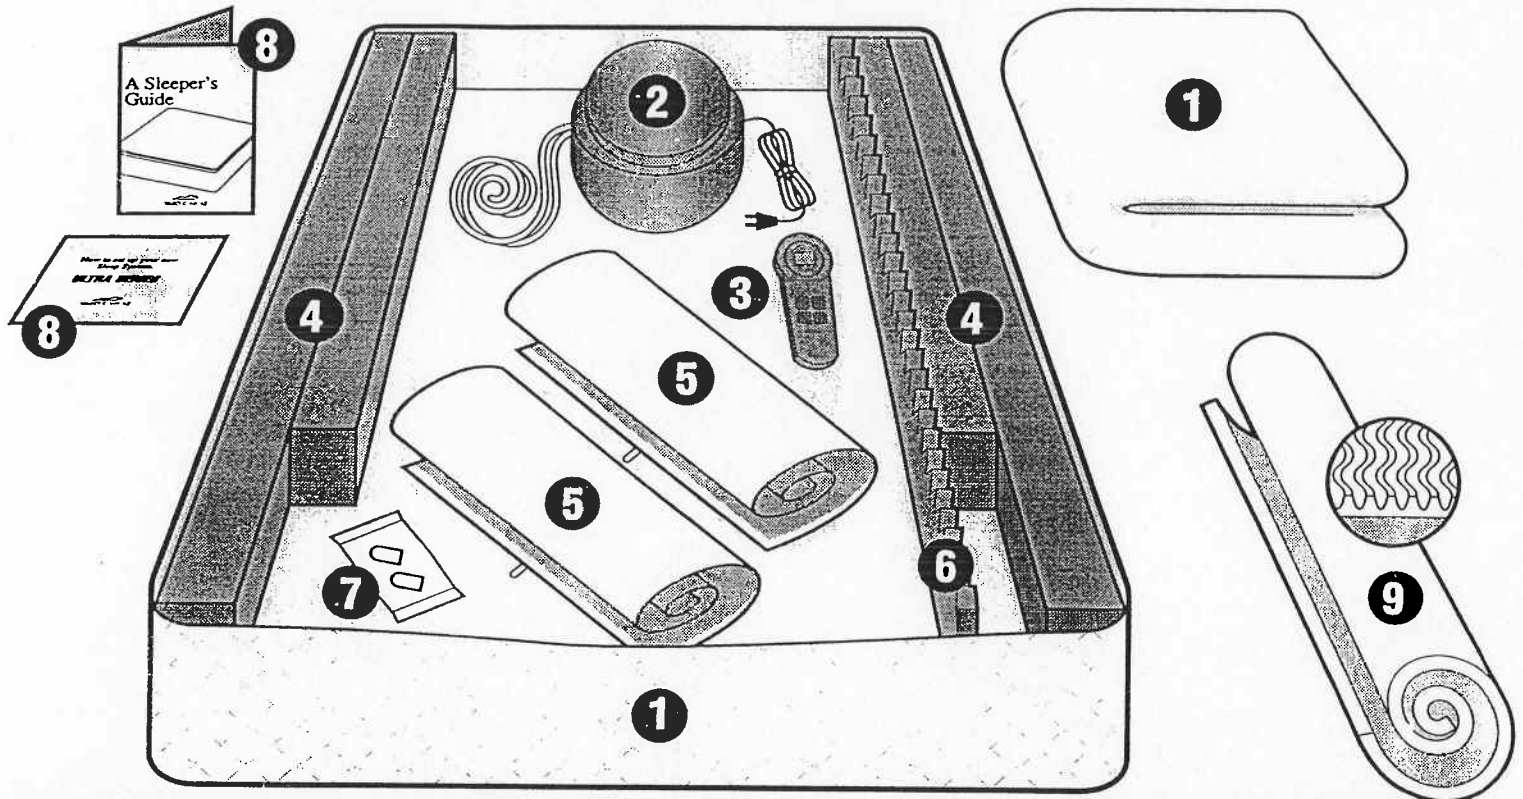


STEP-BY-STEP GUIDE

- 1 Mattress Cover (2 parts zipped together)
- 2 Firmness Control System (FCS)
- 3 Remote Control with 9 volt battery installed
- 4 Foam Border Walls (2 long, 2 short)
- 5 Air Chamber(s) (2 for dual chamber model; 1 for single chamber model)
- 6 Center Foam Wall (for dual chamber model only)
- 7 Caps for Air Chamber(s) (package of 2)
- 8 A Sleeper's Guide and Set-Up Instructions

And for Pillowtop Model only:

- 9 Foam Comfort Pad (1)

Functions of the Remote Control

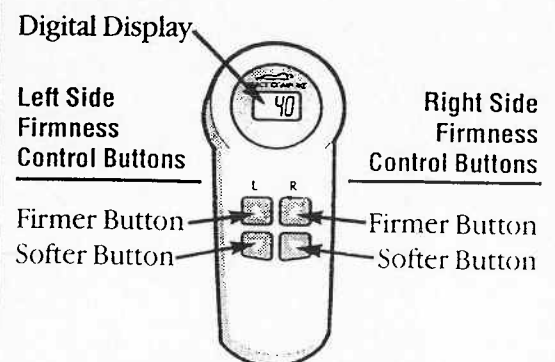


Note: For single chamber model, use only the right side firmness control buttons

Select Comfort Ultra Series Sleep System

1


*Zipped to the
Pillow top.*

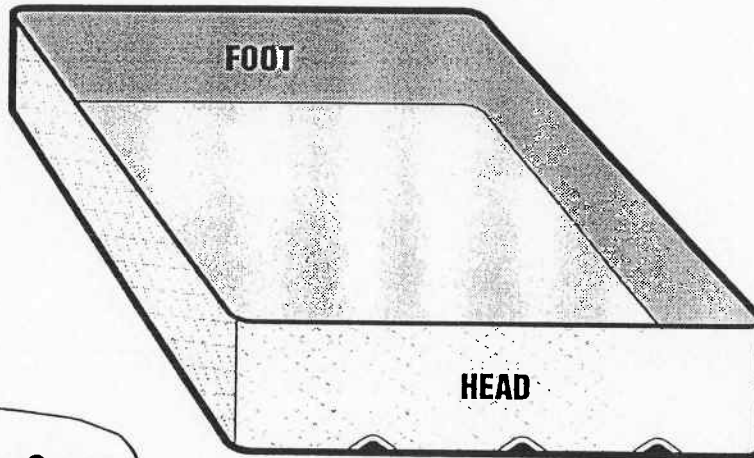

Position the Mattress Cover

- Place the Mattress Cover (quilted side up) on top of the foundation (or bed platform).
- Unzip the top portion of the cover and set it aside.
- Position the cover so that the holes in the underside of the cover are at the head of the bed.

2

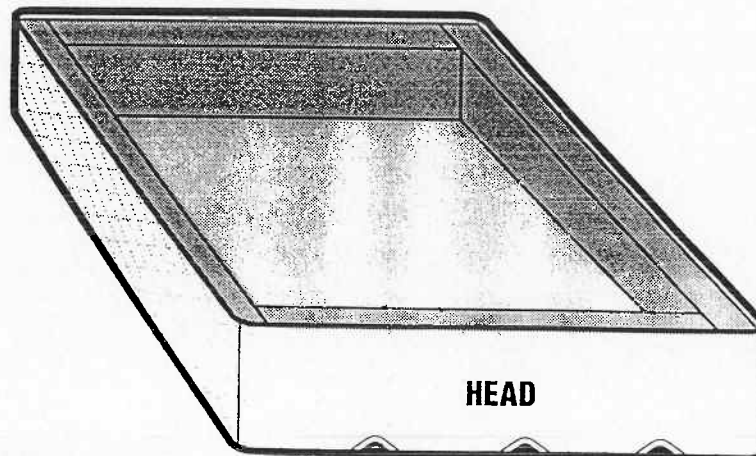


Insert the Foam Border Walls

- Place the two long Foam Border Walls along the sides of the mattress cover with the velcro pads facing inward and the zippers facing downward.
- Place the shorter Foam Border Walls at the head and foot of the bed with the zippers facing downward.
- Connect the velcro pads securely and squarely.

3

Install the Air Chamber(s)

- Lay the Air Chamber(s) inside the mattress cover so that the Hose Connector(s) are on the bottom and face the head of the bed. The connector(s) will roughly align with the small openings at the base of the mattress cover.

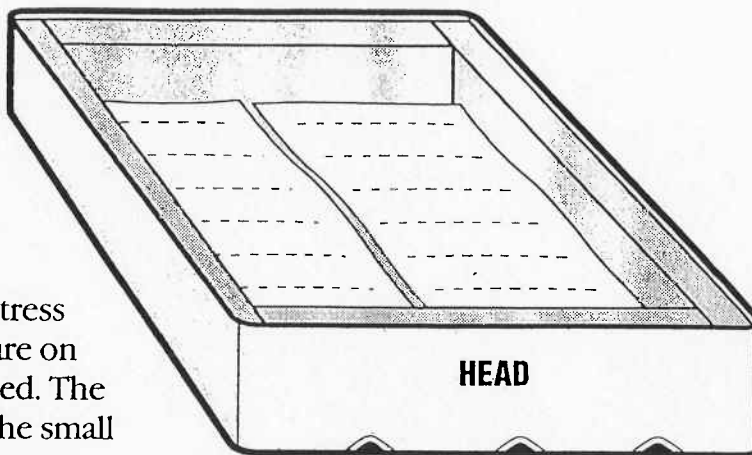


(dual chamber model shown)



4

Connect the Firmness Control System

- Place the Firmness Control System (FCS) on the floor at the head of the bed and plug into an electrical outlet. The unit will "beep" for 1 second, indicating that it is receiving power.
- Take each hose and pass the end through the small opening at the base of the mattress cover, under the Foam Border Wall, and connect it to the corresponding chamber. The Select Comfort product label will be placed at the foot of the bed. (For dual chamber models, the top hose of the FCS works with the right chamber; the bottom hose works with the left chamber.)

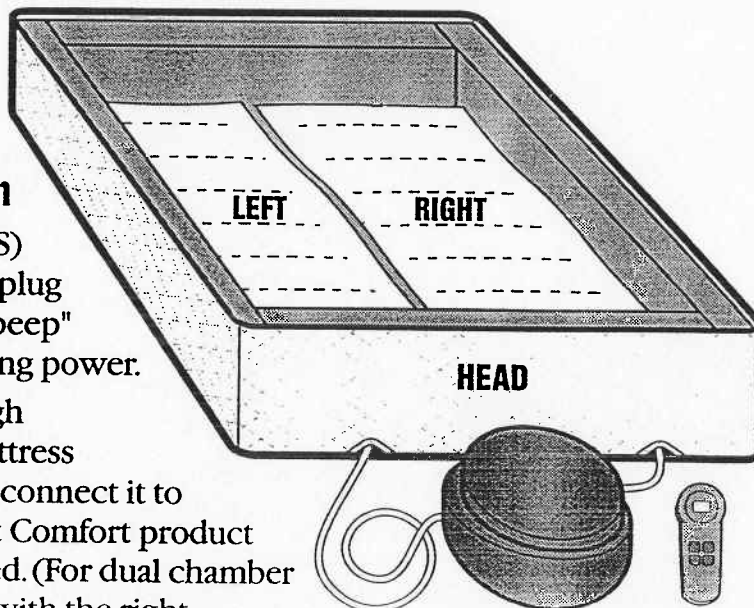


Hint: To ensure a solid connection, press together until they "click."

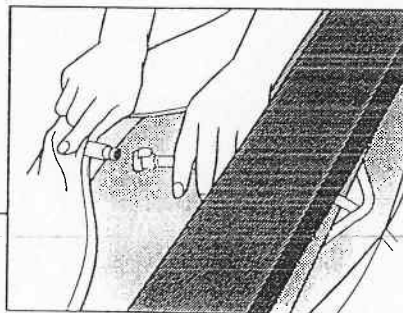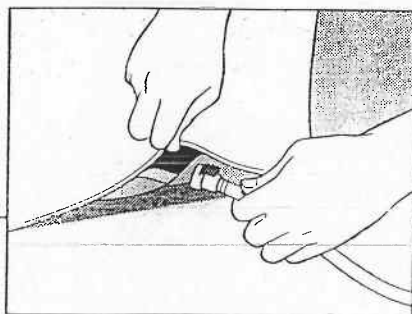

5

Inflate the Air Chamber(s)

- Press the right side "firmer" button on the Remote Control to wake up the FCS. As the Remote Control and Base Unit establish contact, the display will blink several times.
- When the display stops blinking, set the firmness to "20" and the chamber will begin inflating. (The first time you fill each chamber, it may take about 15 minutes or more. The FCS shuts itself off after 10 minutes, so simply set the firmness to "20" again to reactivate the pump and complete the initial fill.)
- If you have the dual chamber model, once the first chamber has finished inflating repeat for second. Then insert the Center Foam Wall between the chambers, centering it between the head and foot.

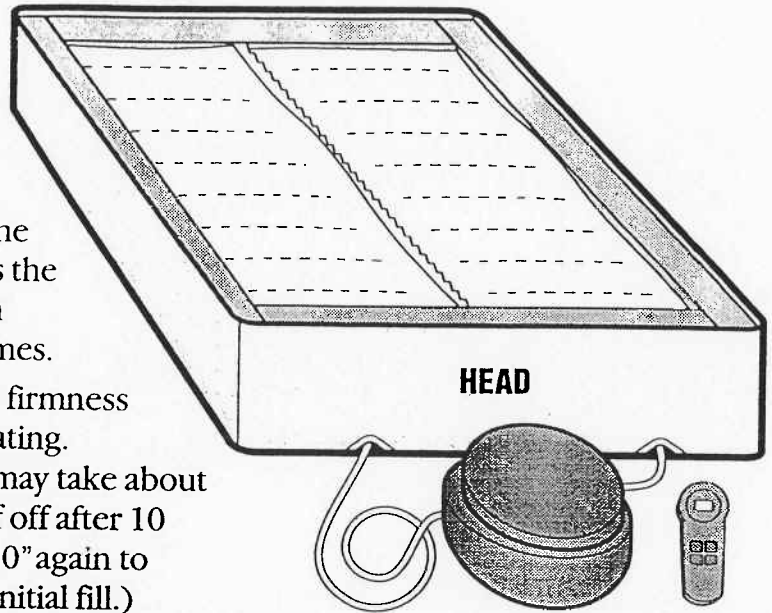


6

*If you purchased a
Pillowtop Model Mattress ...*


Install the Foam Comfort Pad

- Place the Foam Comfort Pad on top of the Air Chamber(s) with the "zones" facing up. The end with the clipped corners should be at the head of the bed. The pad should rest neatly on top of the chamber(s), nesting inside the Foam Border Walls.

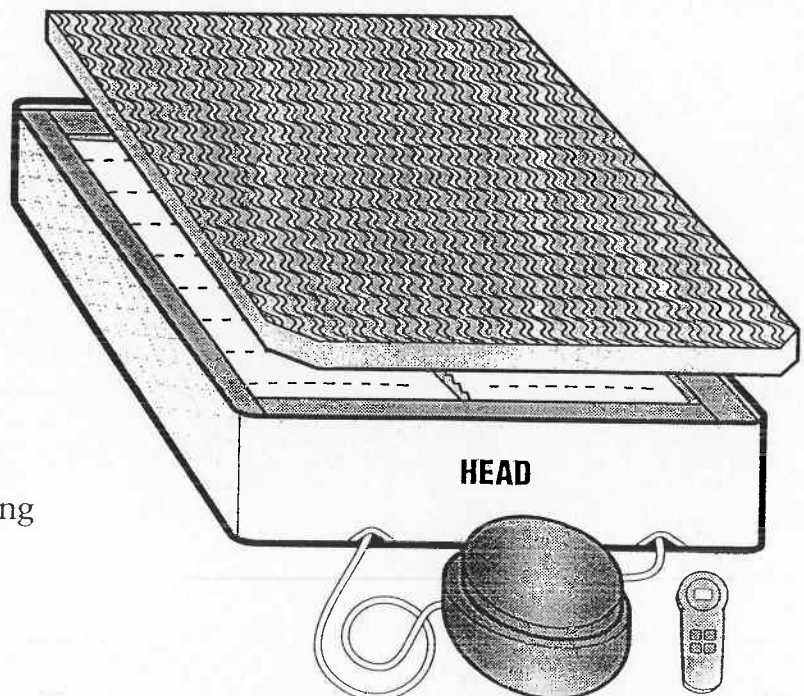


7

Pillowtop Model

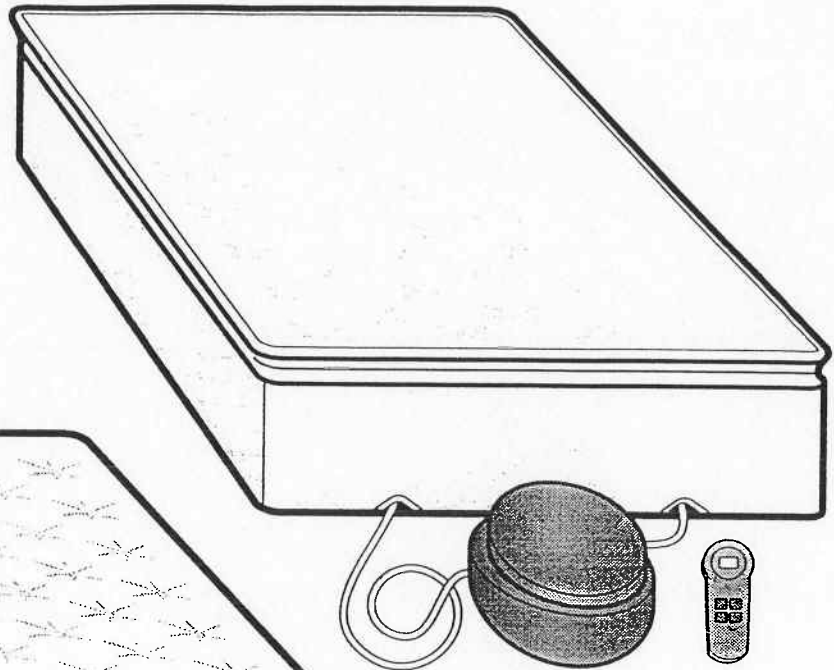

Traditional Model

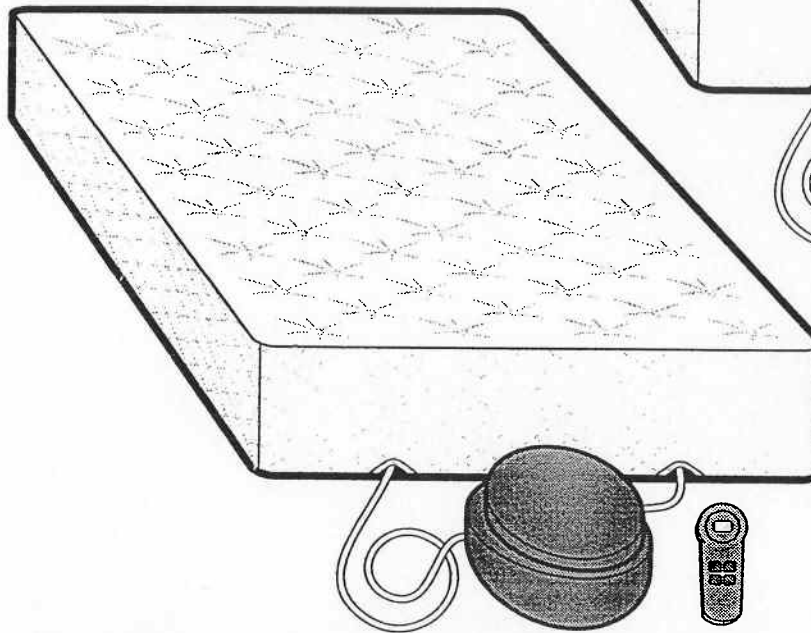

Final Steps

- Zip on the top of the Mattress Cover.
- Move the bed to your desired location.
- Arrange the FCS underneath the bed, making sure the hoses are not crimped.

That's it! You're done.

Be sure to read "A Sleeper's Guide," which explains how to adjust mattress firmness and provides other user information. And have a good night's sleep!